


ASSEMBLY INSTRUCTIONS

MODEL : WM1536-DC

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST			PART LIST		
A	JCBC M6 x 50mm + S/W M6 + F/W M6 x 13mm	6PCS	1	CHAIR BACK	1PC
			2	FRONT LEG	1PC
B	ALLEN- KEY (M4)	1PC	3	SIDE RAIL (L & R)	2PCS
C	CSK SCREW M3.5 x 12mm	8PCS	4	CUSHION	1PC
D	L-BRACKET	4PCS			


CAUTIONS :

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**


(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)

(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**


STEP 1

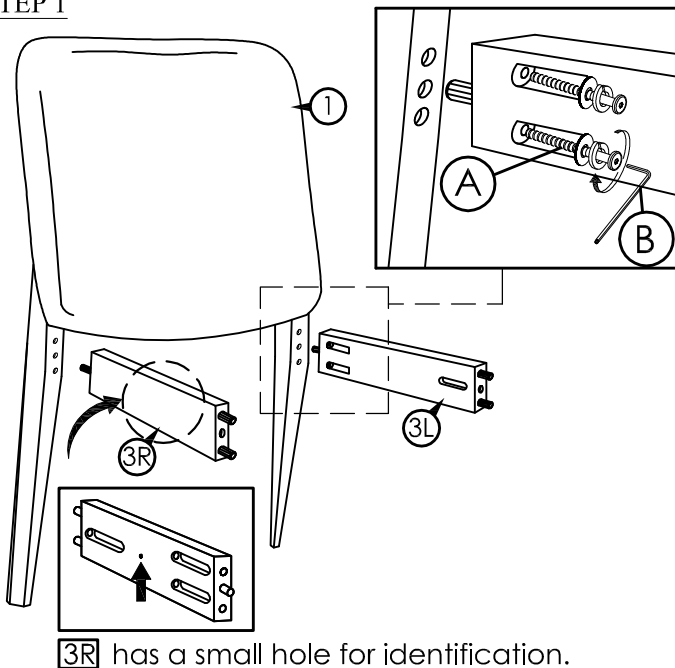


STEP 2

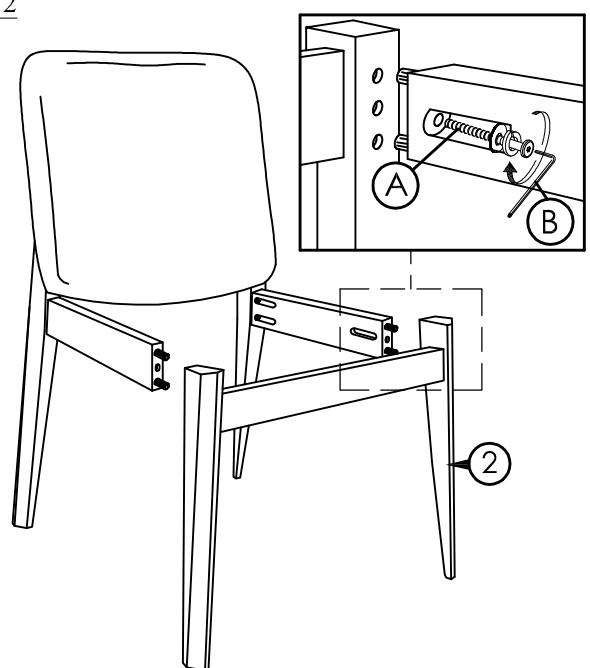

STEP 3

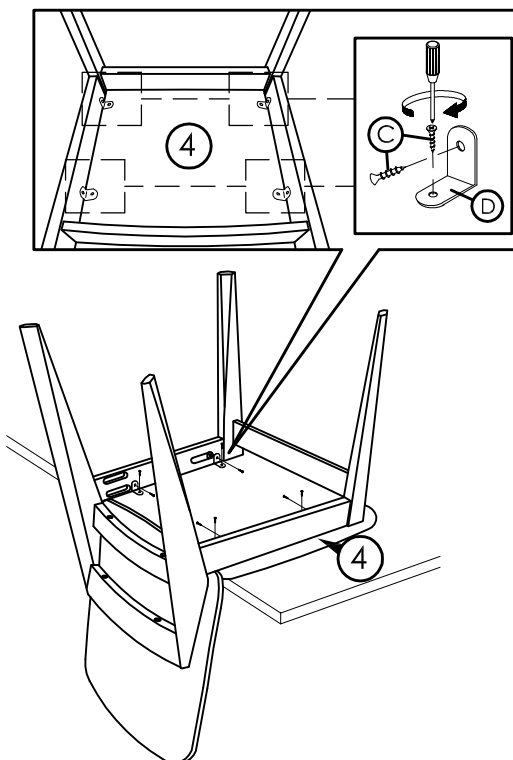

STEP 4

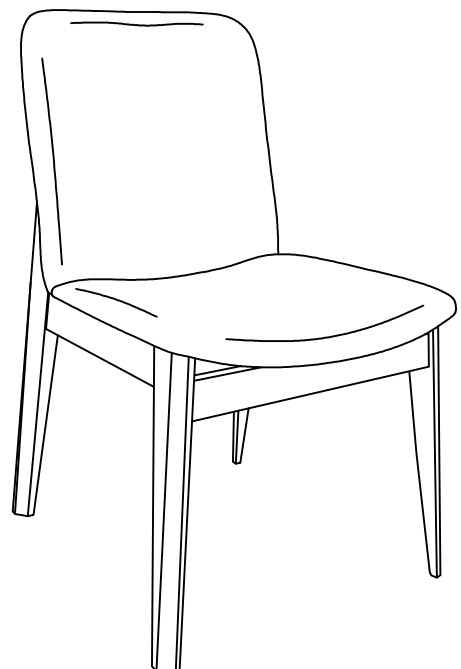

COMPLETED CHAIR ASSEMBLY.