
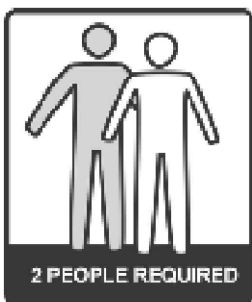


Assembly Instructions

KINGSTON

Queen Size Upholstered Bed

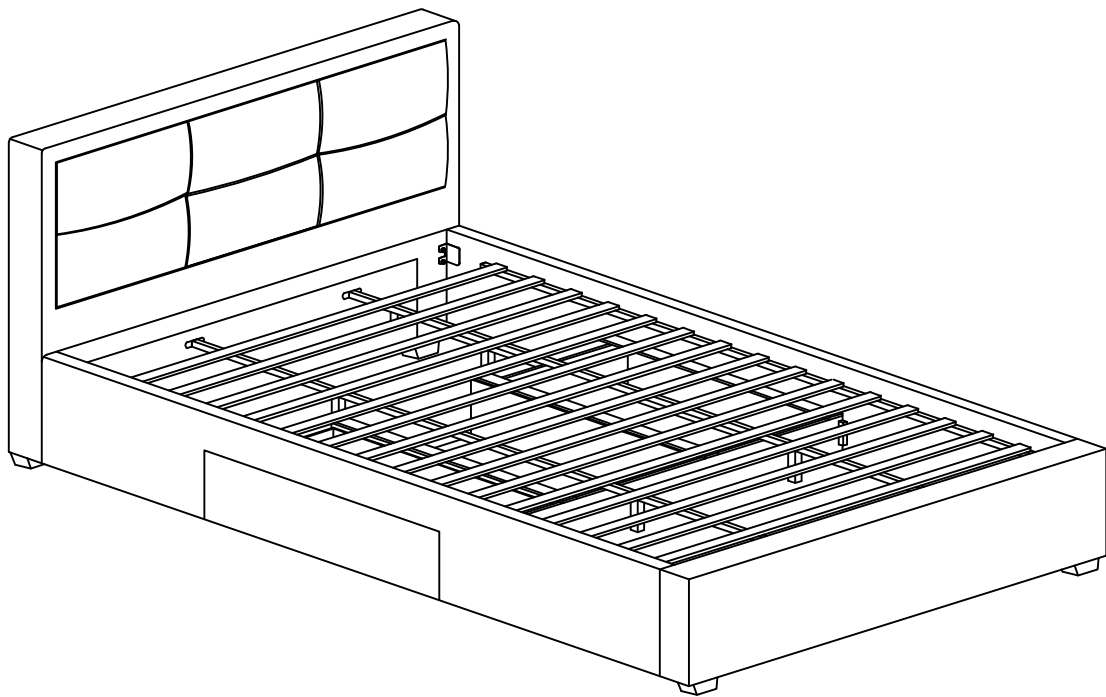

Ver1.1

jar furniture

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1




Read Instructions carefully.
Check no parts are missing.

2

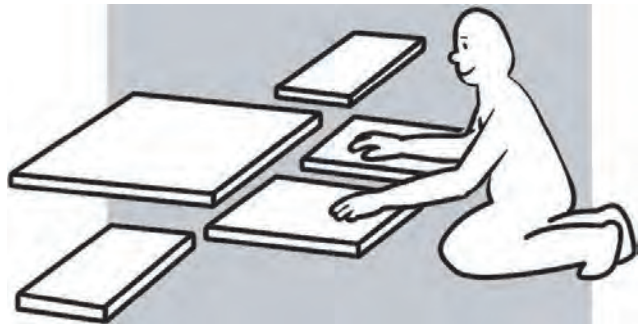

Lay out all of the components on a soft surface
as if you were preparing to do a jigsaw puzzle.

3

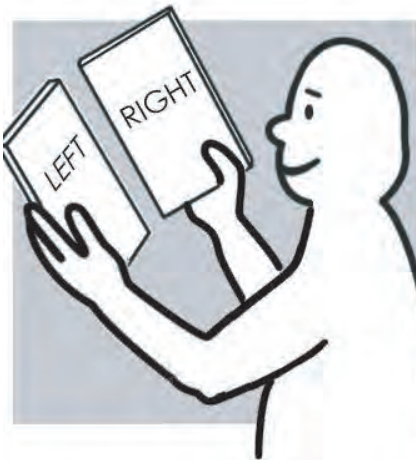


Carefully identify each component, especially
those that are similar. The most common mistake
is getting things back to front.

4




Separate and identify each component from the
hardware pack and rest each one in its proper
location before fastening.

5

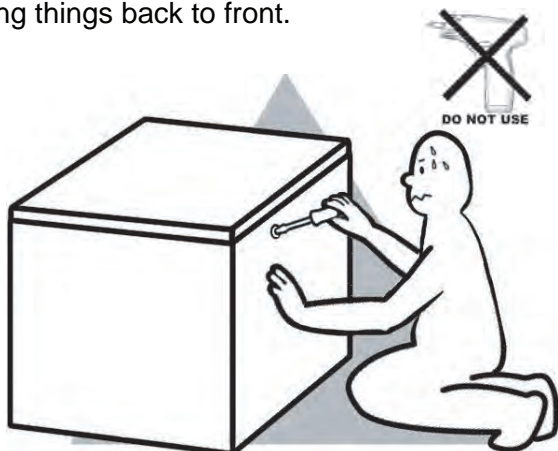

DO NOT fully tighten screws (leave slightly
loose). When the item is fully assembled
tighten the screws - but do not over tighten.

6

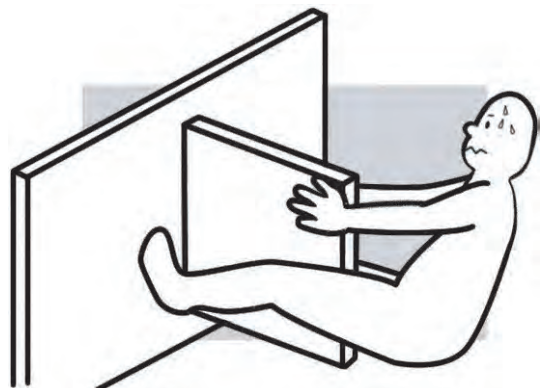


If glue is required **DO NOT** set until you are
certain that the parts belong together.

What you Need


To Assemble the Body




(Tools not provided)
Phillips Head Screwdriver

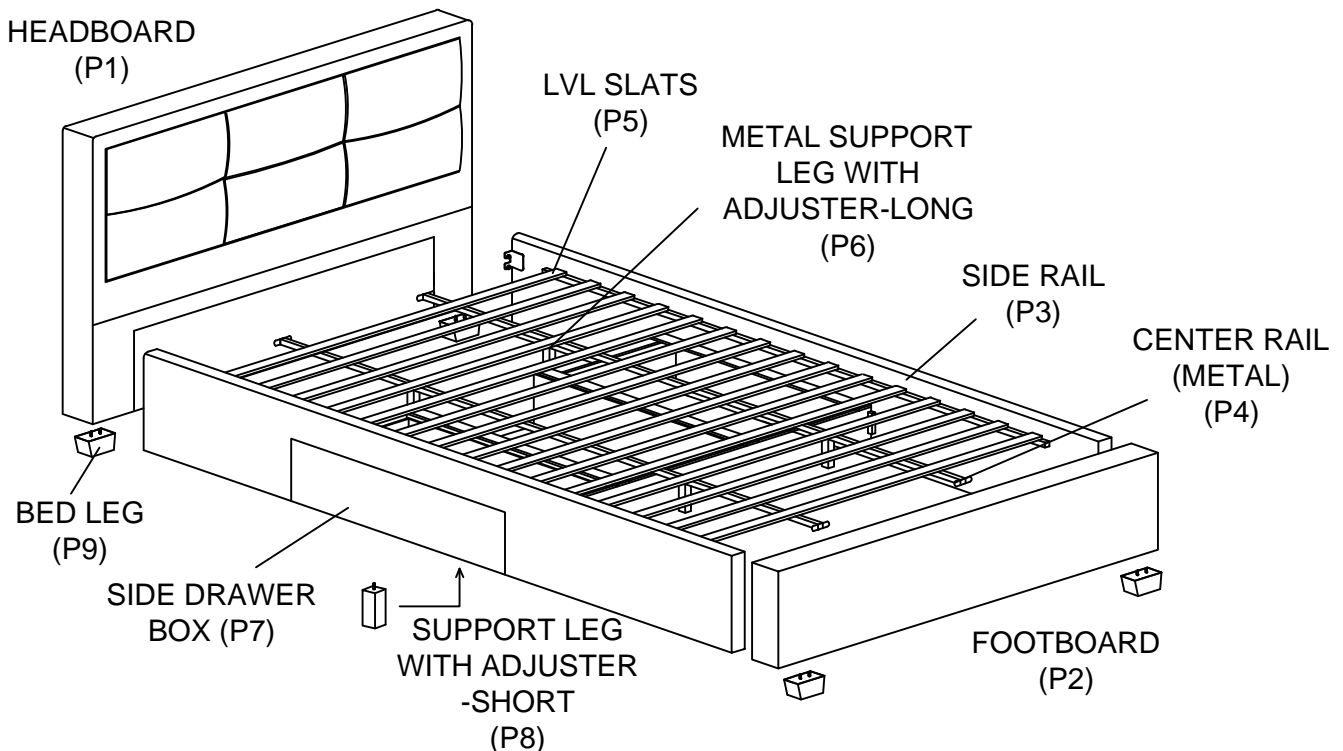


8 x JCBB Screw
M8 x 40mm
(H1)



4 x JCBB Screw
M8 x 60mm
(H2)



8 x JCBC Screw
M6 x 30mm
(H3)



18 x JCBC Screw
M6 x 50mm
(H4)



38 x Spring
Washer $\frac{5}{16}$ "
(H5)



28 x Flat Washer
 $\frac{5}{16}$ "
(H6)



10 x Flat
Washer $\frac{1}{4}$ "
(H7)



24 x CSK
Screw
M4 x 30mm
(H8)



8 x CSK Screw
M4 x 38mm
(H9)







1 x Allen Key
M4
(H10)




1 x Allen Key
M5
(H11)





Please make sure you have all these parts before you start.


Step 1

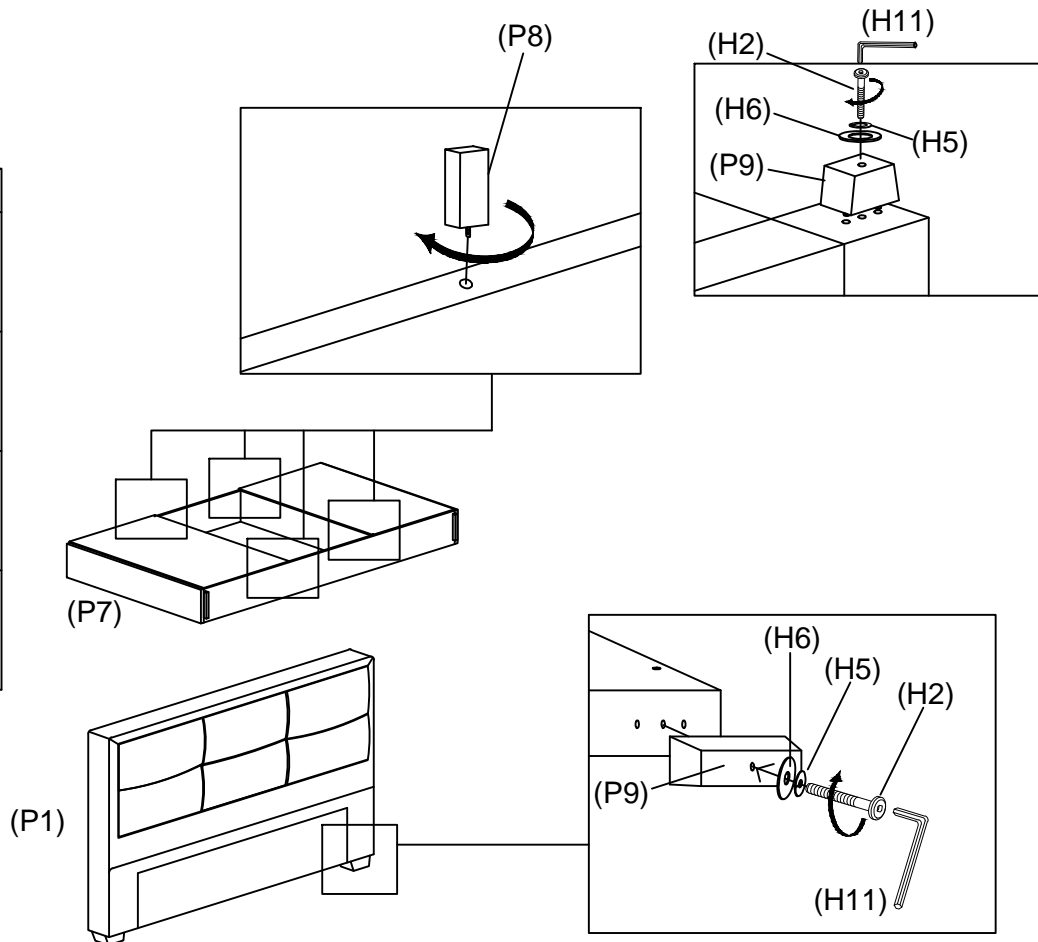You will need:	
4 x JCBB Screw M8 x 60mm (H2)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M5 (H11)	






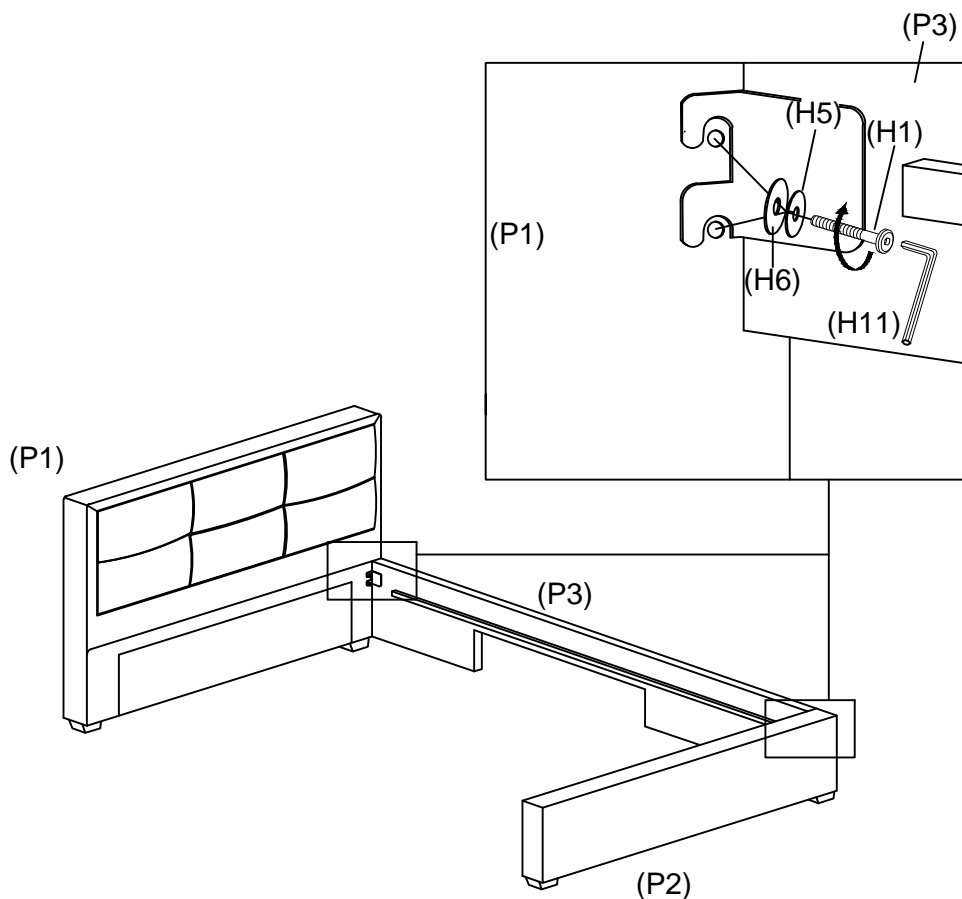

Step 2


You will need:	
4 x JCBB Screw M8 x 40mm (H1)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M5 (H11)	



Step 3





You will need:

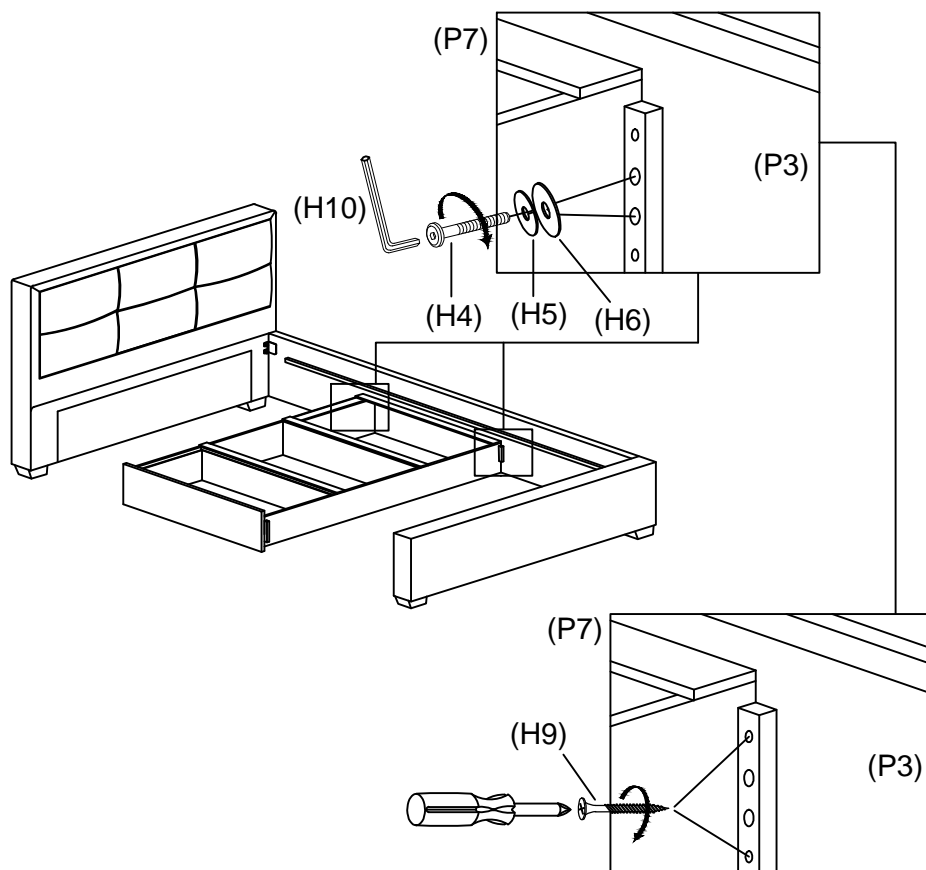
4 x JCBC Screw M6 x 50mm (H4)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
4 x CSK Screw M4 x 38mm (H9)	
1 x Allen Key M4 (H10)	



Step 4




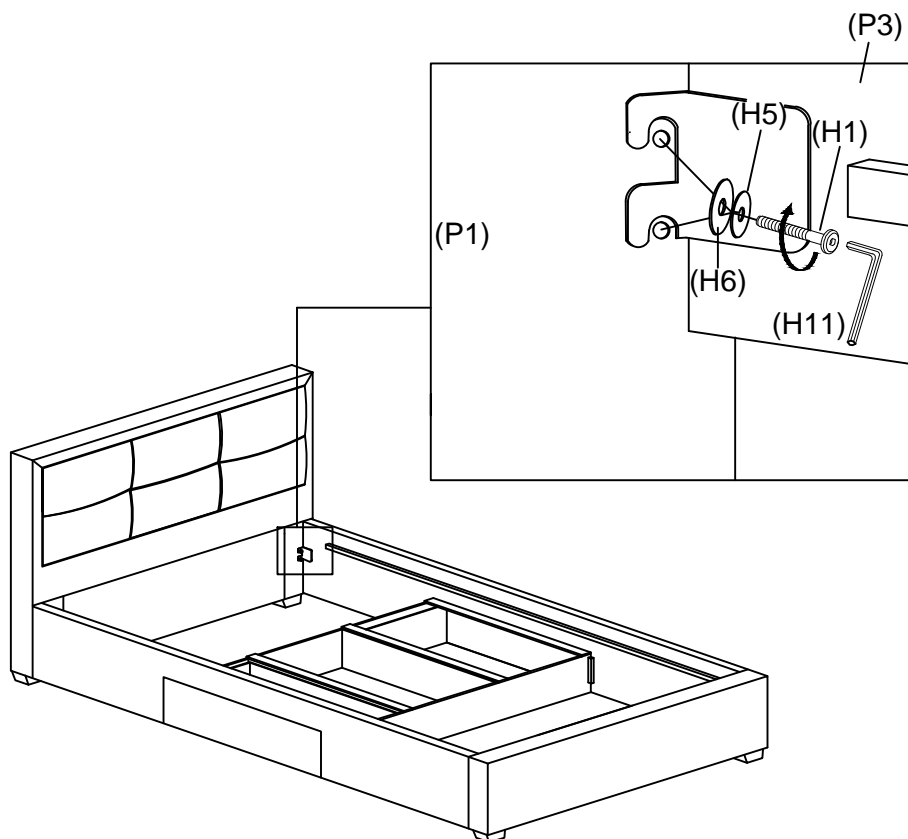

You will need:


4 x JCBB Screw M8 x 40mm (H1)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M5 (H11)	



Step 5





You will need:

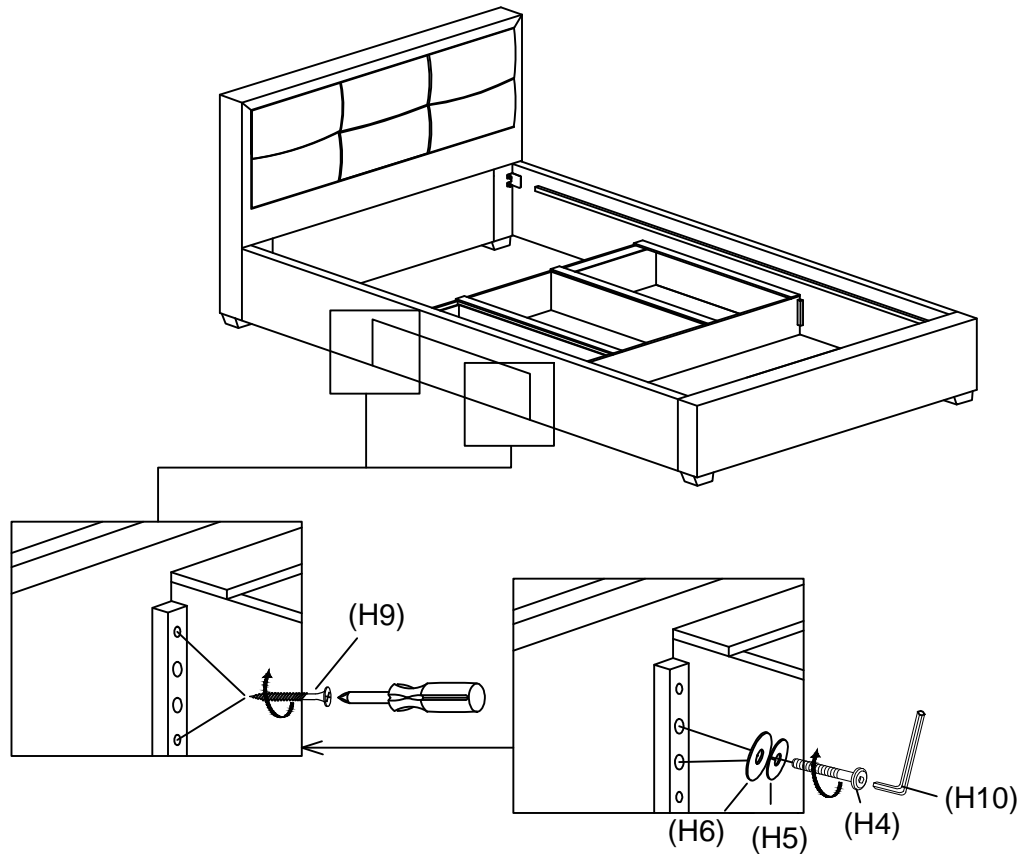
4 x JCBC Screw M6 x 50mm (H4)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
4 x CSK Screw M4 x 38mm (H9)	
1 x Allen Key M4 (H10)	



Step 6



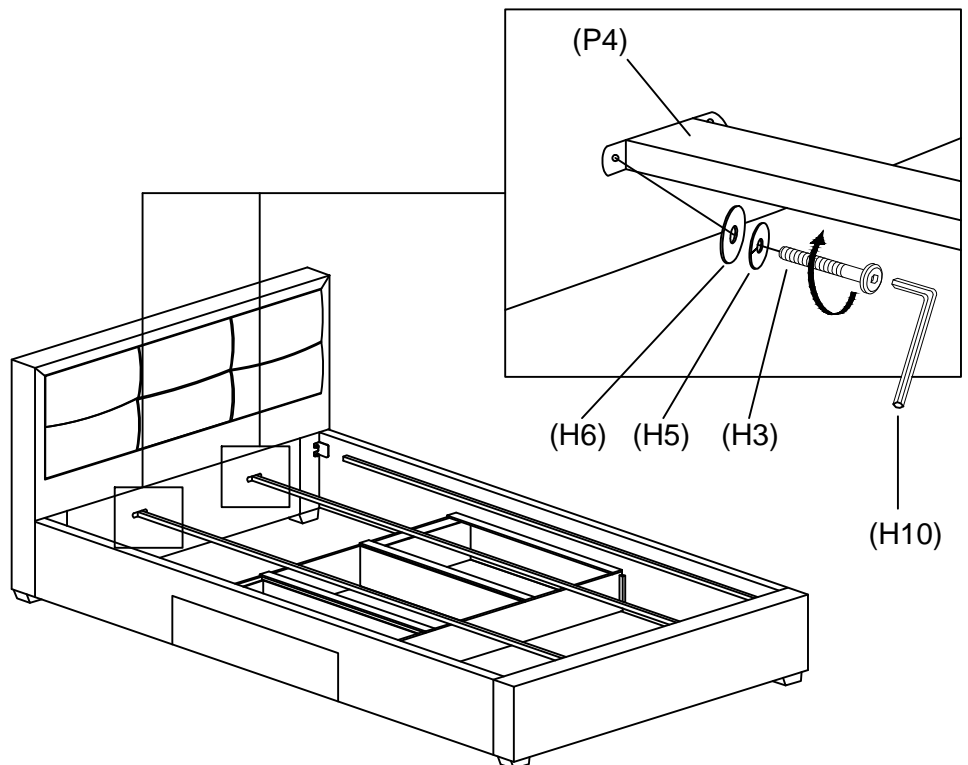

You will need:


8 x JCBC Screw M6 x 30mm (H3)	
8 x Spring Washer $\frac{5}{16}$ " (H5)	
8 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M4 (H10)	



Step 7





You will need:

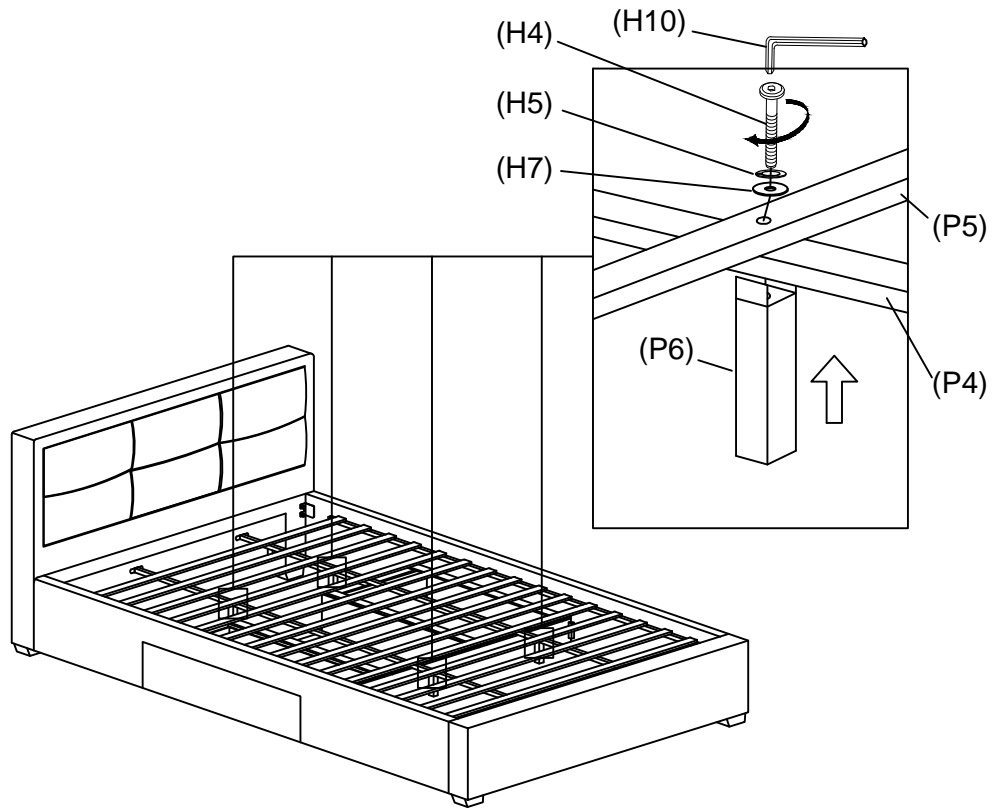
4 x JCBC Screw M6 x 50mm (H4)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{1}{4}$ " (H7)	
1 x Allen Key M4 (H10)	



Step 8

You will need:


6 x JCBC Screw M6 x 50mm (H4)	
6 x Spring Washer $\frac{5}{16}$ " (H5)	
6 x Flat Washer $\frac{1}{4}$ " (H7)	
1 x Allen Key M4 (H10)	

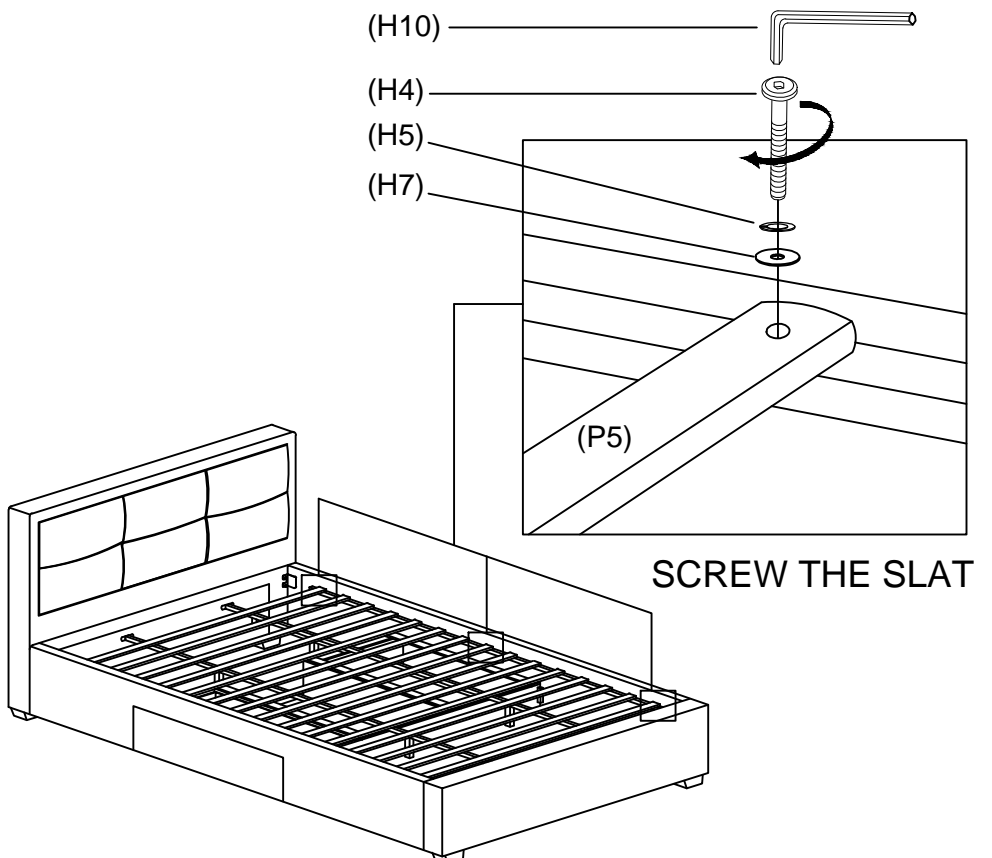



Step 9

You will need:

24 x CSK Screw
M4 x 30mm
(H8)

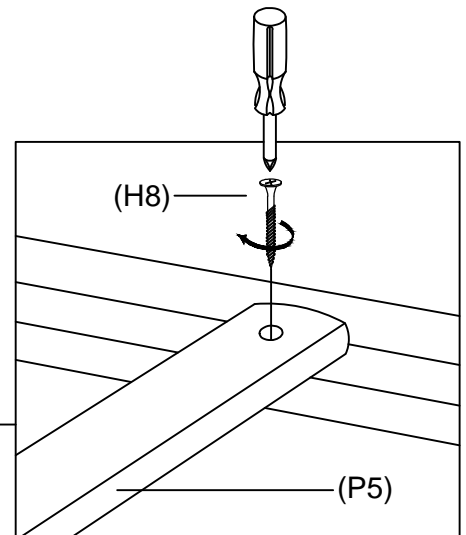

SCREW THE SLAT

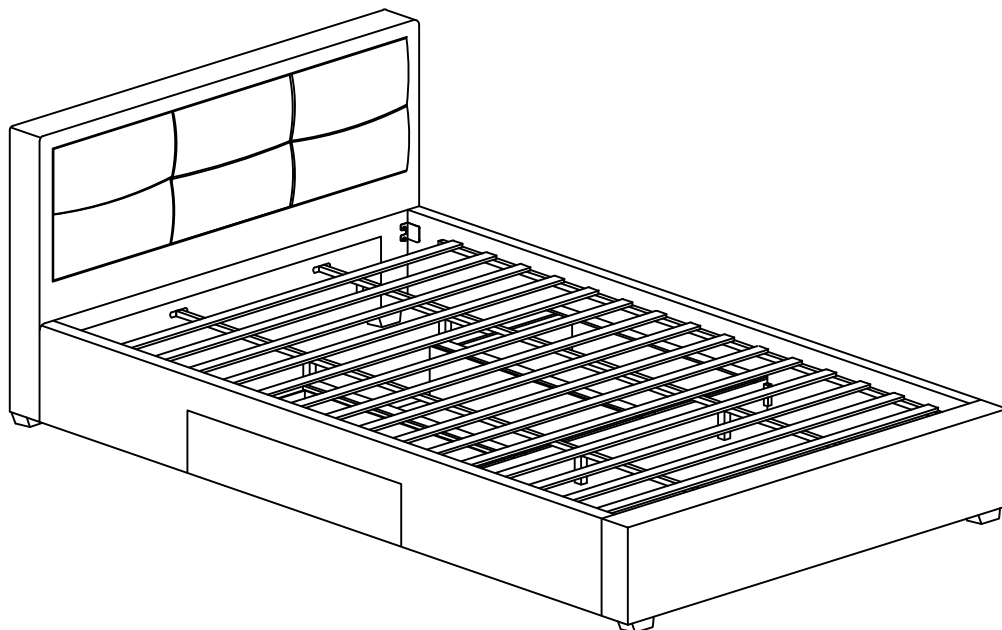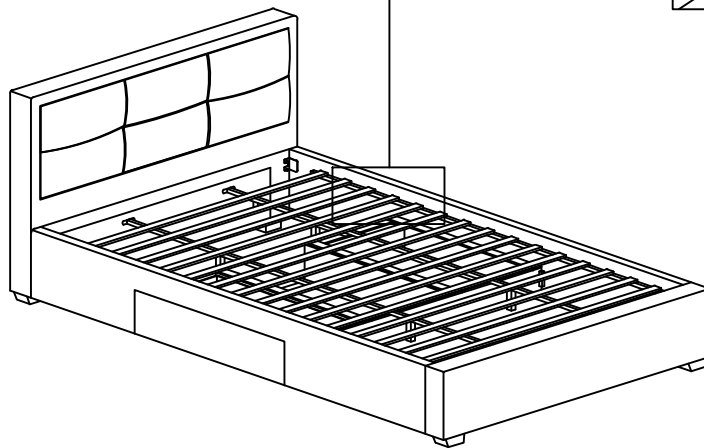

COMPLETED ASSEMBLY