


Assembly Instructions

MIAMI

Queen Size Upholstered Bed

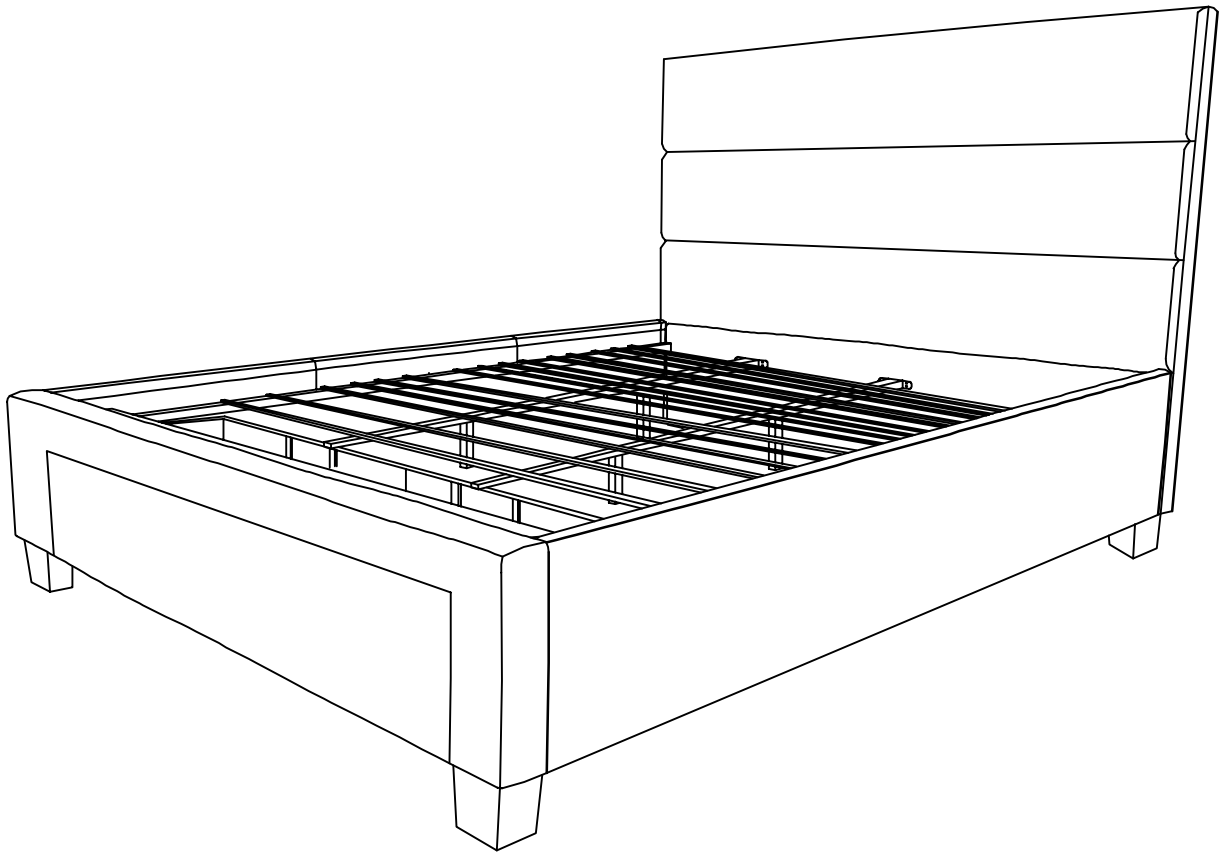


Ver1.1

jar furniture

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE
THAT IS NOT COVERED BY YOUR WARRANTY

1

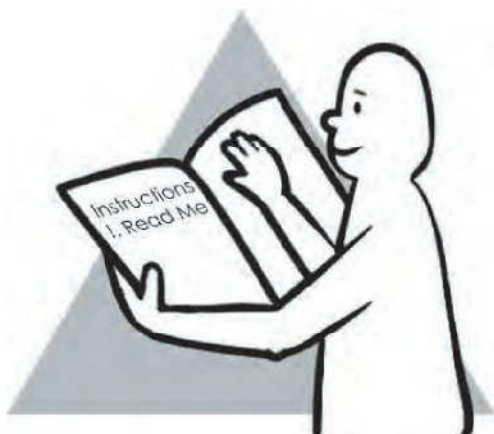


Read Instructions carefully.
Check no parts are missing.

2

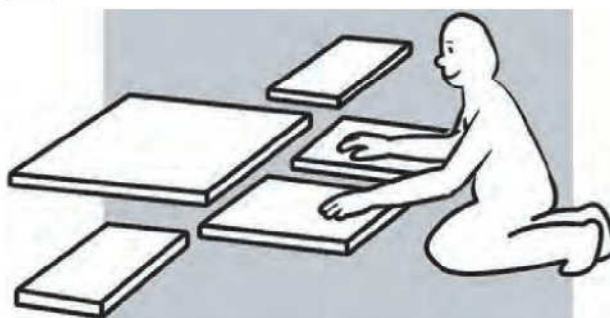


Lay out all of the components on a soft surface
as if you were preparing to do a jigsaw puzzle.

3

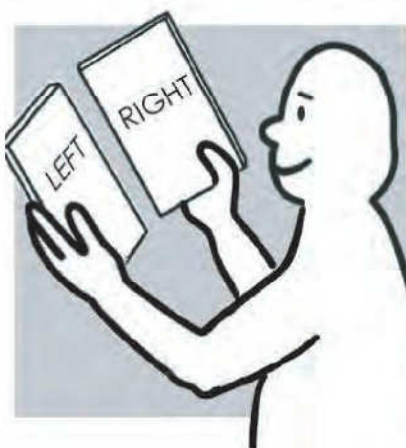


Carefully identify each component, especially
those that are similar. The most common mistake
is getting things back to front.

4

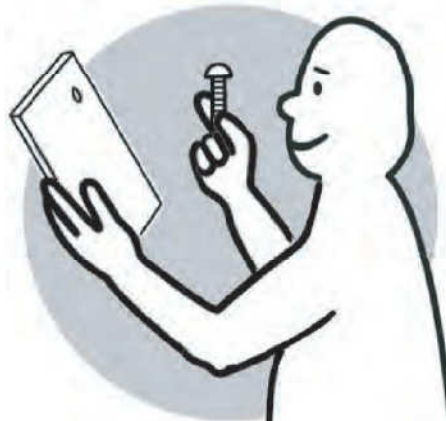


Separate and identify each component from the
hardware pack and rest each one in its proper
location before fastening.

5

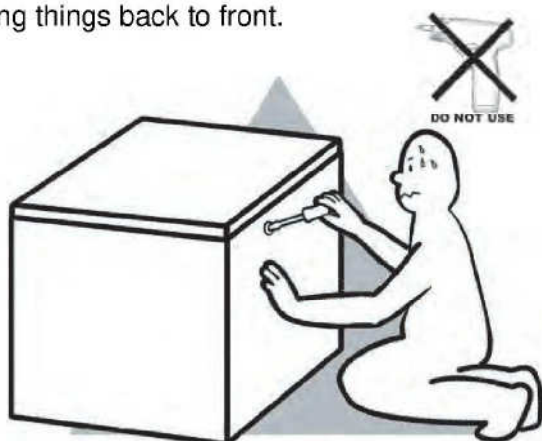

DO NOT fully tighten screws (leave slightly
loose). When the item is fully assembled
tighten the screws - but do not over tighten.

6

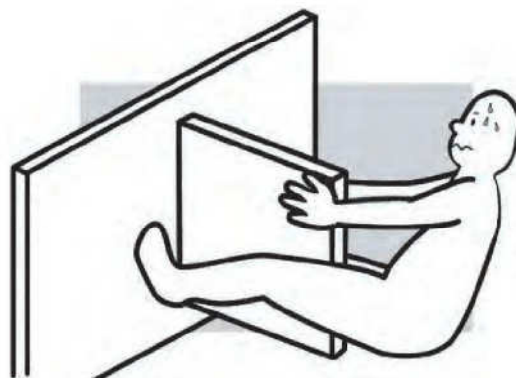



If glue is required **DO NOT** set until you are
certain that the parts belong together.

What you Need

To Assemble the Body




(Tools not provided)
Phillips Head Screwdriver

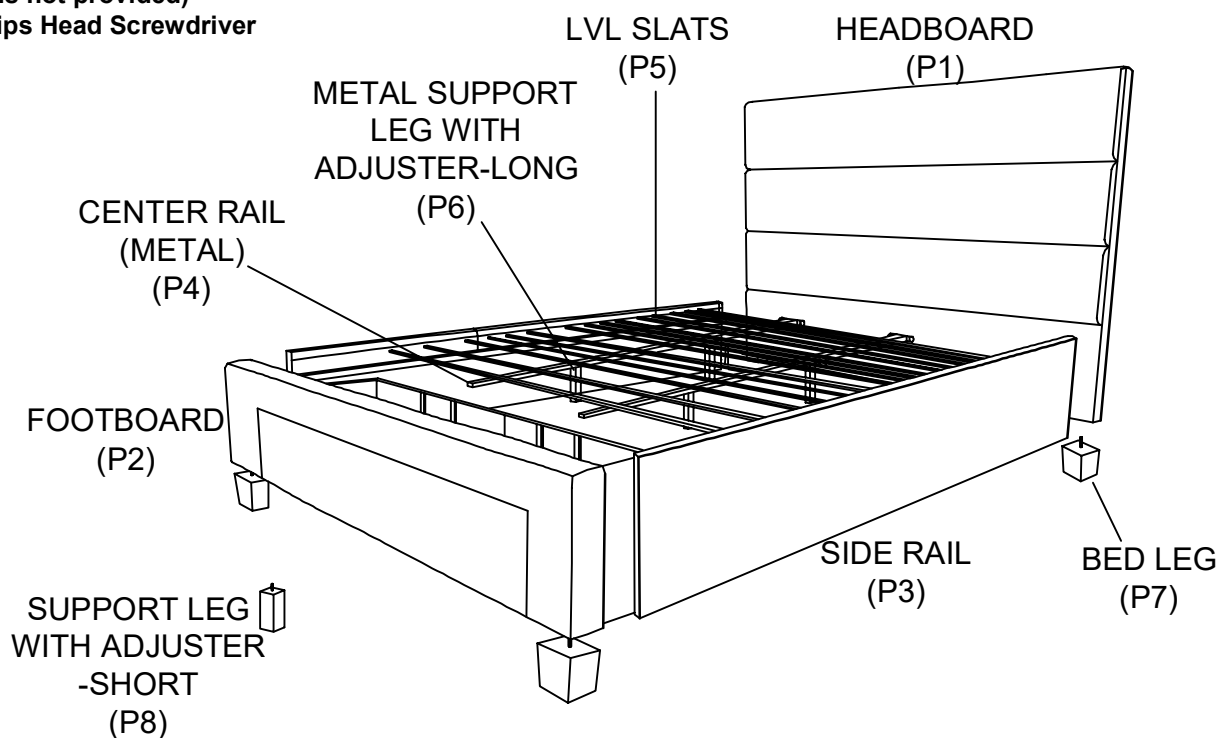

8 x JCBB Screw
M8 x 40mm
(H1)



4 x JCBB Screw
M8 x 100mm
(H2)



8 x JCBC Screw
M6 x 30mm
(H3)



10 x JCBC Screw
M6 x 50mm
(H4)



30 x Spring Washer
5/16"
(H5)




20 x Flat
Washer 5/16"
(H6)




10 x Flat
Washer 1/4"
(H7)



24 x CSK
Screw
M4 x 30mm
(H8)



1 x Allen Key
M4
(H9)








1 x Allen Key
M5
(H10)

Please make sure you have all these parts before you start.

Step 1





You will need:

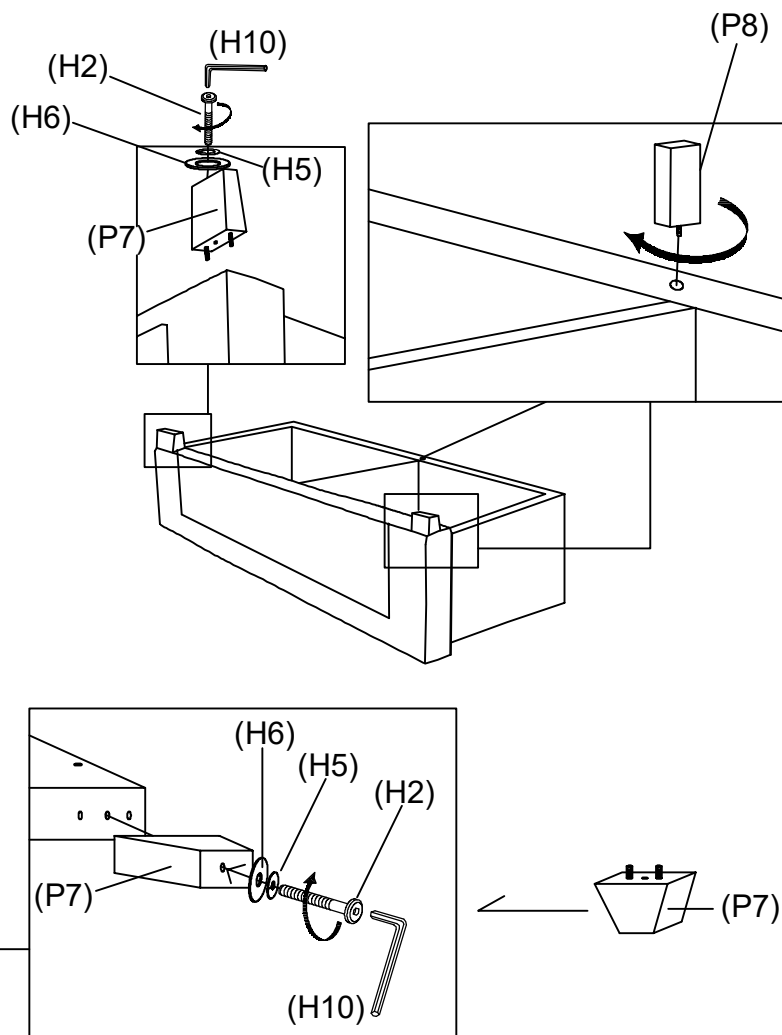
4 x JCBB Screw M8 x 100mm (H2)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M5 (H10)	







Step 2



You will need:

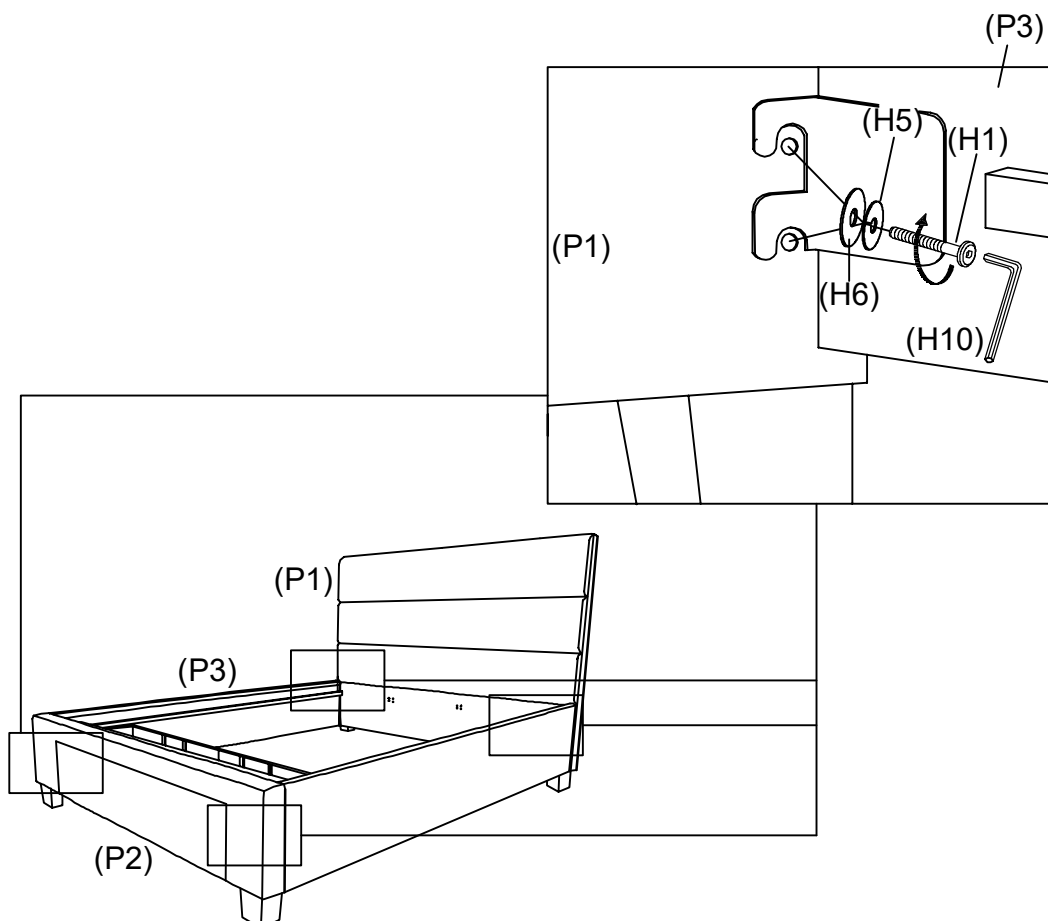8 x JCBB Screw M8 x 40mm (H1)	
8 x Spring Washer $\frac{5}{16}$ " (H5)	
8 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M5 (H10)	








Step 3

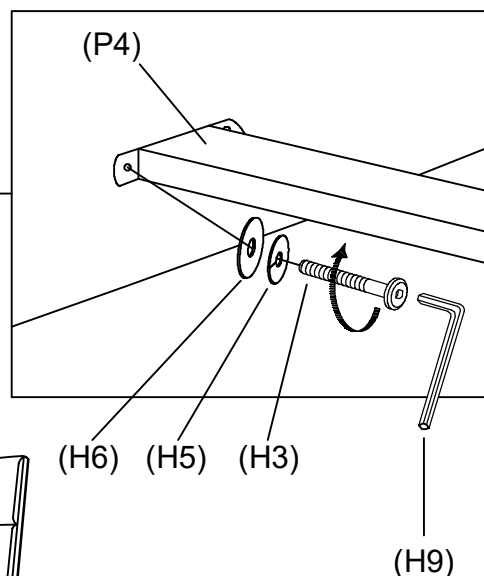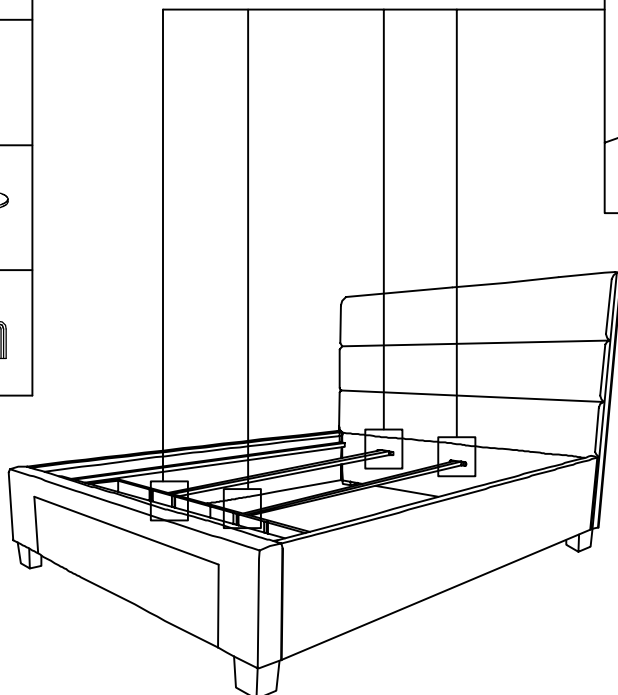You will need:	
8 x JCBC Screw M6 x 30mm (H3)	
8 x Spring Washer $\frac{5}{16}$ " (H5)	
8 x Flat Washer $\frac{5}{16}$ " (H6)	
1 x Allen Key M4 (H9)	







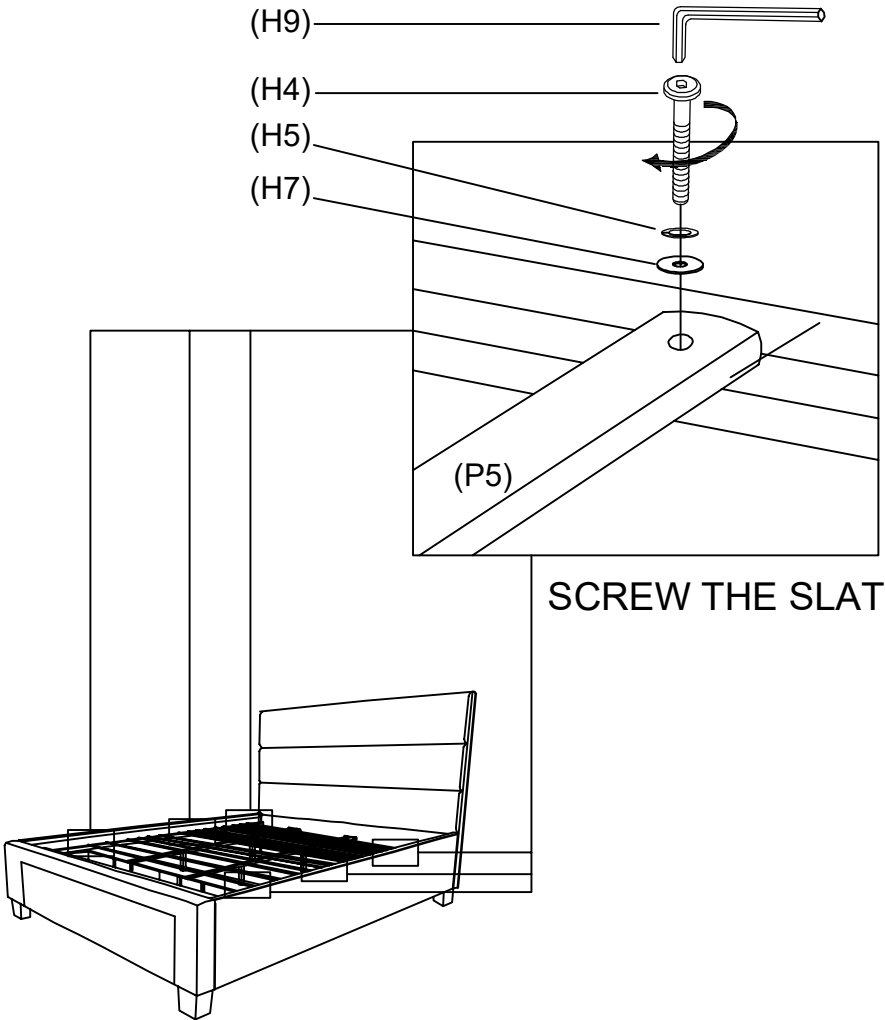
Step 4

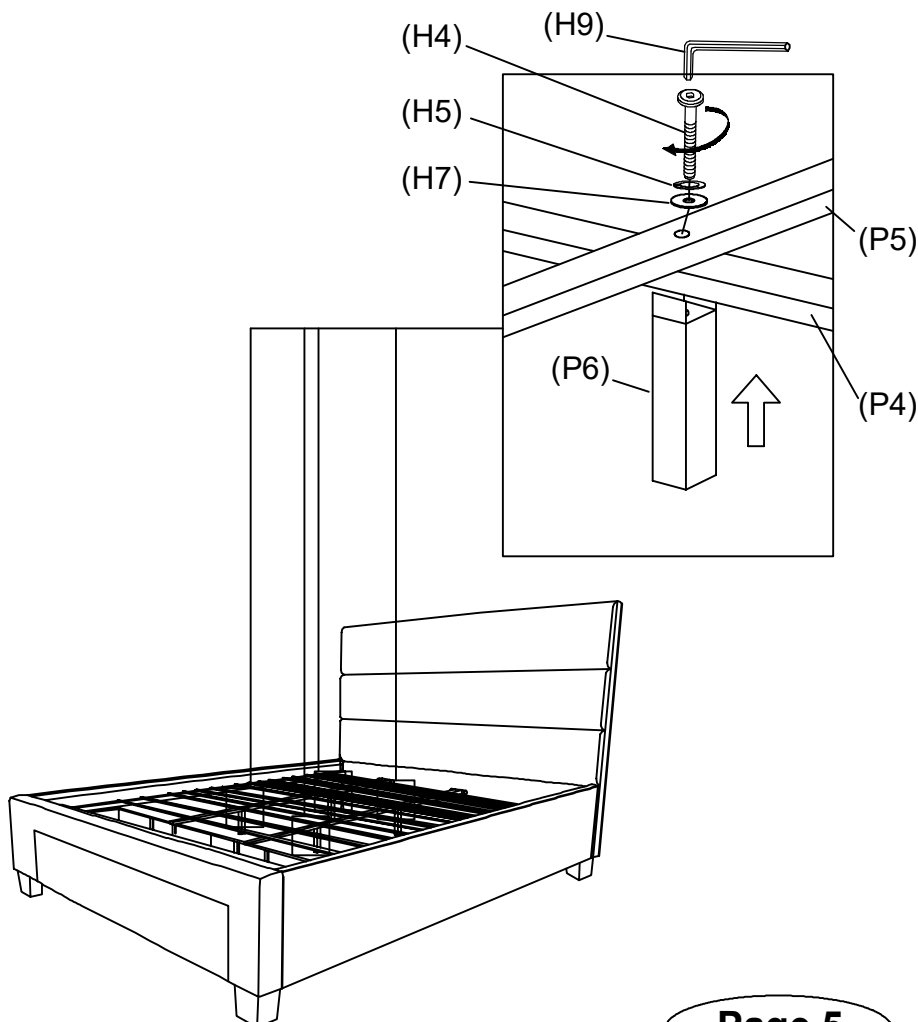You will need:	
4 x JCBC Screw M6 x 50mm (H4)	
4 x Spring Washer $\frac{5}{16}$ " (H5)	
4 x Flat Washer $\frac{1}{4}$ " (H7)	
1 x Allen Key M4 (H9)	



Step 5

You will need:	
6 x JCBC Screw M6 x 50mm (H4)	
6 x Spring Washer $\frac{5}{16}$ " (H5)	
6 x Flat Washer $\frac{1}{4}$ " (H7)	
1 x Allen Key M4 (H9)	



Step 6

You will need:	
24 x CSK Screw M4 x 30mm (H8)	