


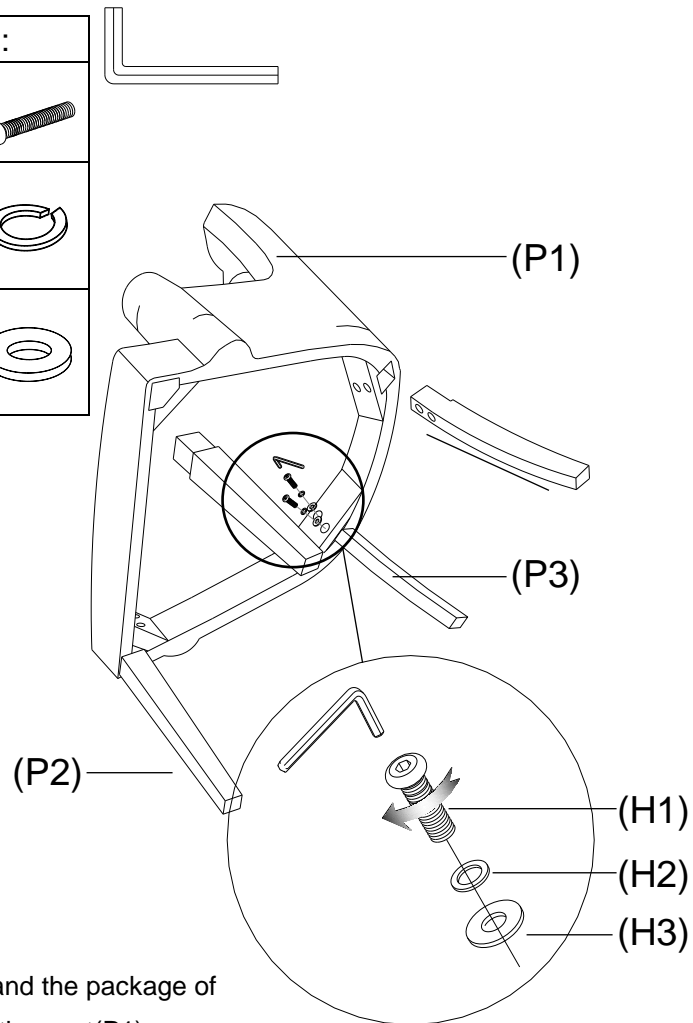


Step 1

You will need:	
8*Bolt (H1)	
8*Spring Washer (H2)	
8*Flat Washer (H3)	



Take out the 4 wooden legs and the package of hardware accessories from the seat(P1).
Insert each leg(P2,P3) completely vertically into each seat frame corner.
Now tighten the bottom bolt at first, then the blot on the top by using
8 Bolts(H1)+8 Flat washer Rings(H3)+8 Spring washer Rings(H2) with the tool provided.


THE JOB IS COMPLETE

PLEASE DISPOSE OF ALL PACKAGING THOUGHTFULLY

IN THE INTEREST OF OUR ENVIRONMENT

Assembly Instructions


NEW ZEALAND TUB CHAIR

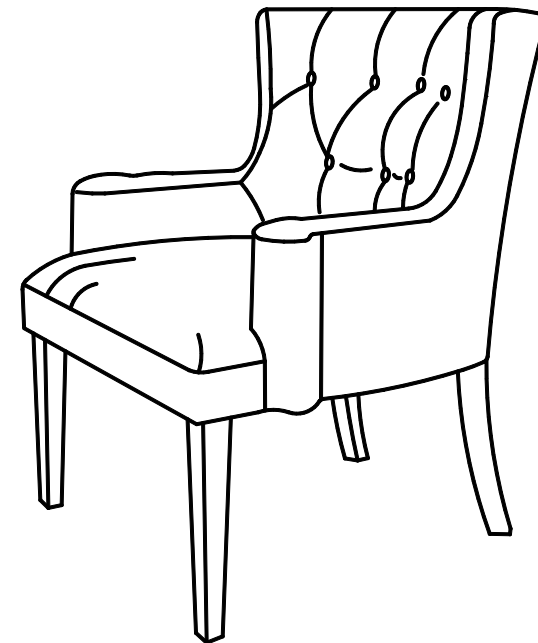

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

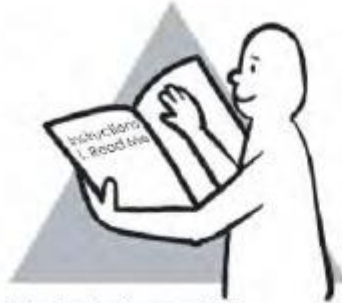


Read Instructions carefully. Check no parts are missing.

2

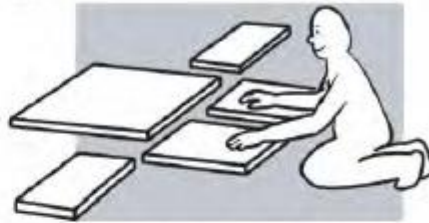

Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.

3

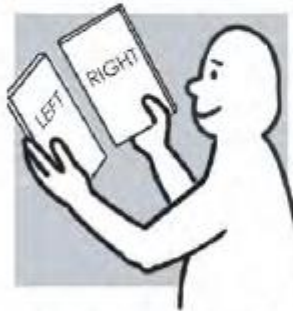

Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

4




Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

5



DO NOT fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

6

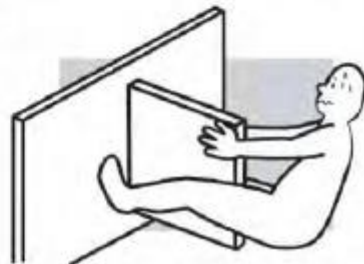


If glue is required **DO NOT** set until you are certain that the parts belong together.


What you Need




1x Allen Key (5mm)
(PROVIDED)

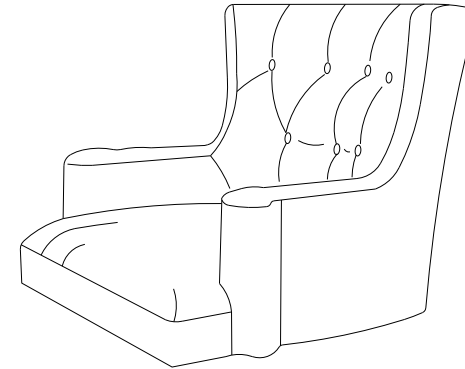


Accent Chair
(P1)

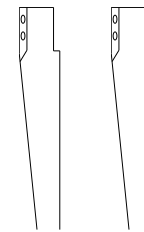

2*Front legs
(P2)

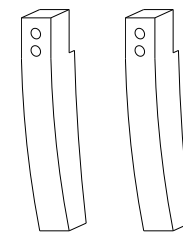

2*Back legs
(P3)



8*Bolt
(H1)



8*Spring Washer
(H2)



8*Flat Washer
(H3)

Please make sure you have all these parts before you start.