


212mm

STEP 9

YOU WILL NEED:	
4 x H7	16mm


1 x ALLEN KEY (4MM)
(PROVIDED)

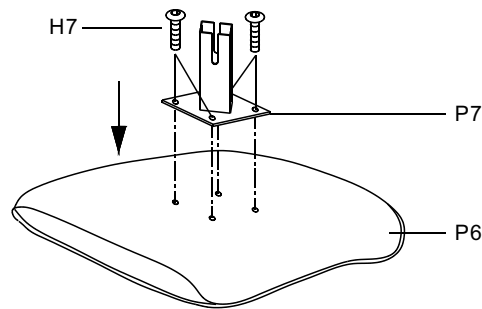


STEP 10

YOU WILL NEED:	
8 x H8	35mm
4 x H9	

1 x ALLEN KEY (6MM)
(PROVIDED)

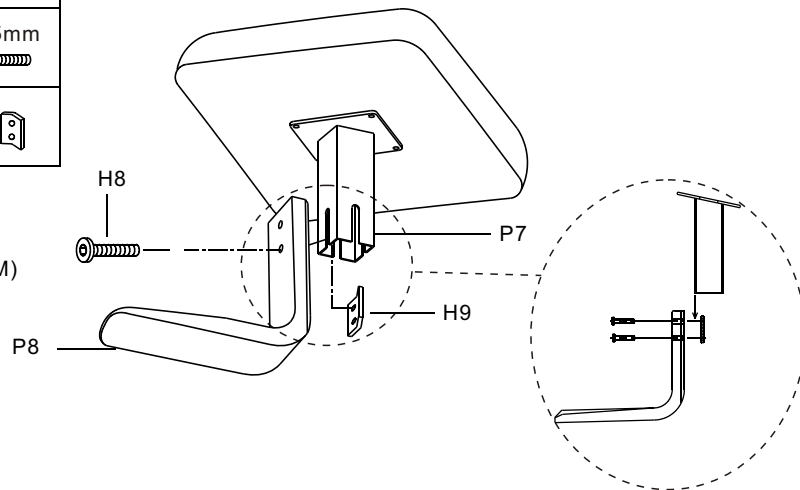

STEP 11

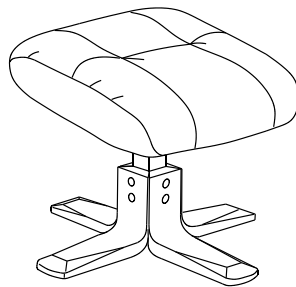

THE JOB IS COMPLETE!
IN THE INTEREST OF OUR ENVIRONMENT
PLEASE DISPOSE OF ALL PACKAGING THOUGHTFULLY.

Assembly Instructions

PHOENIX

Recliner chair




284mm

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE
THAT IS NOT COVERED BY YOUR WARRANTY

1

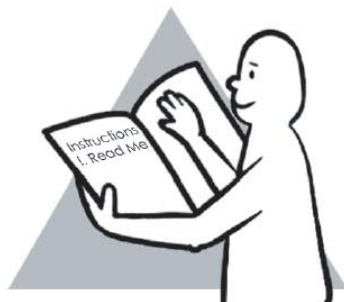


Read Instructions carefully.
Check no parts are missing.

2

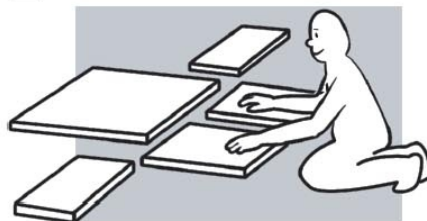

Lay out all of the components on a soft surface
as if you were preparing to do a jigsaw puzzle.

3

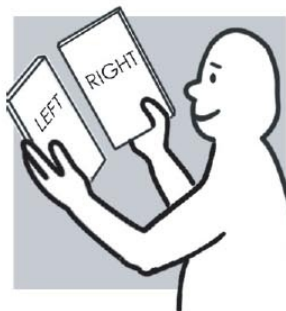


Carefully identify each component, especially
those that are similar. The most common mistake
is getting things back to front.

4



Separate and identify each component from the
hardware pack and rest each one in its proper
location before fastening.

5

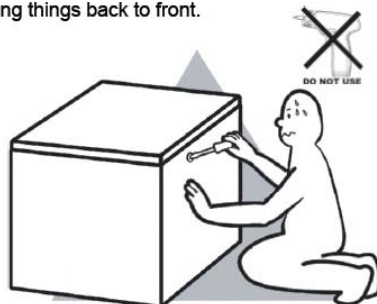

DO NOT fully tighten screws (leave slightly
loose). When the item is fully assembled
tighten the screws - but do not over tighten.

6



If glue is required **DO NOT** set until you are
certain that the parts belong together.


Page 2

STEP 7

YOU WILL NEED:




1 x ALLEN KEY (5MM)
(PROVIDED)

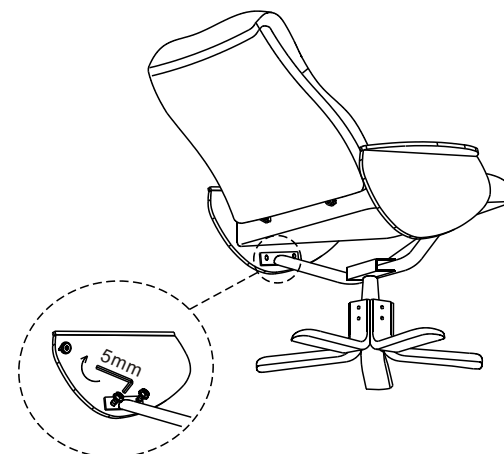

Tighten the screws

STEP 8

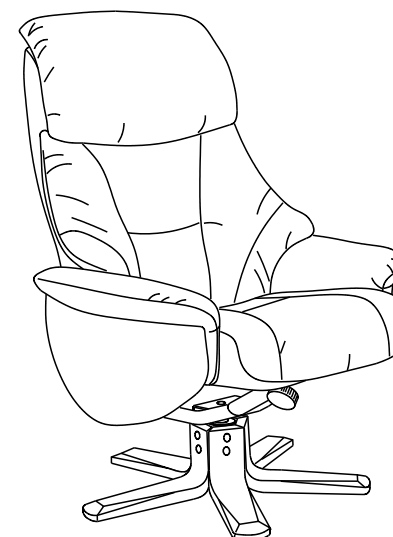

THE JOB IS COMPLETE!

IN THE INTEREST OF OUR ENVIRONMENT
PLEASE DISPOSE OF ALL PACKAGING THOUGHTFULLY.



Page 7



212mm

284mm



212mm

STEP 5

YOU WILL NEED:	
2 x H5	
2 x H6	

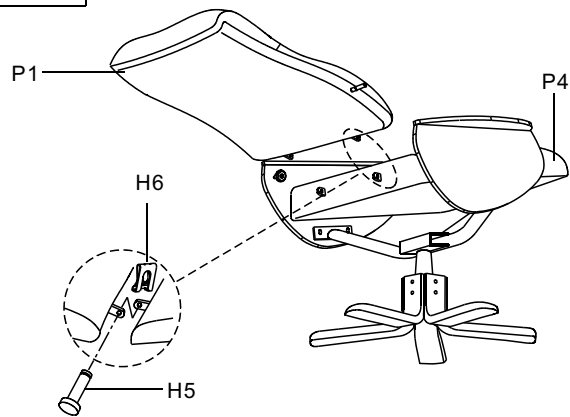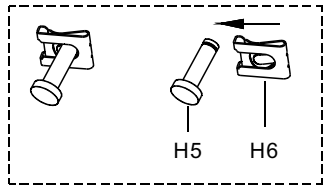

STEP 6

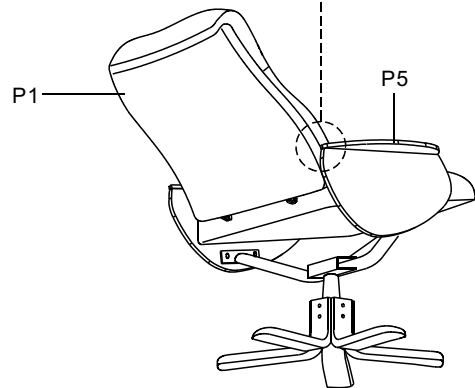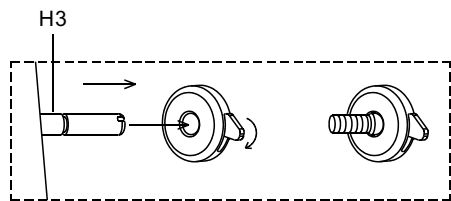

WHAT YOU NEED




1 x ALLEN KEY (4MM)
(PROVIDED)




1 x ALLEN KEY (5MM)
(PROVIDED)












1 x ALLEN KEY (6MM)
(PROVIDED)



1 x SCREWDRIVER
(PROVIDED)

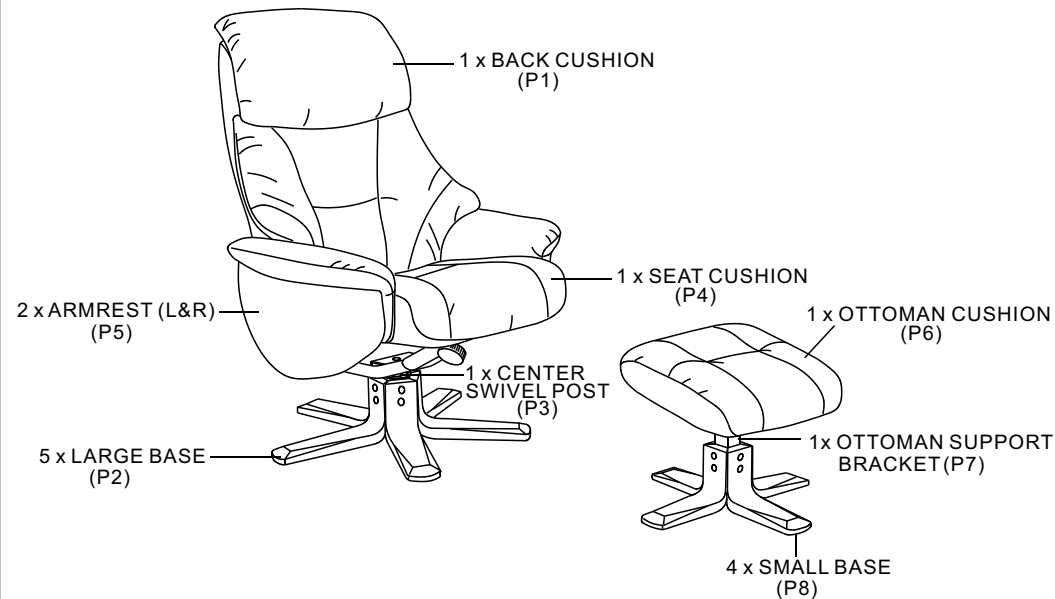


				
10 x SCREWS(35mm) (H1)	5 x STEELS (H2)	2 x RODS (H3)	4 x SCREWS(27mm) (H4)	2 x LOCK PINS (H5)
				
2 x CLIPS (H6)	4 x SCREWS(16mm) (H7)	8 x SCREWS(35mm) (H8)	4 x STEELS (H9)	


284mm

212mm



STEP 1


YOU WILL NEED:	
2 x H3	



1 x SCREWDRIVER
(PROVIDED)

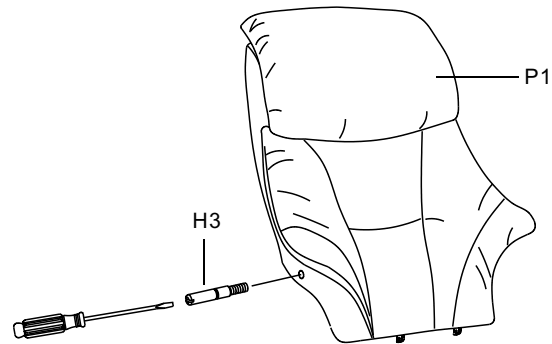


STEP 2


YOU WILL NEED:	
10 x H1	35mm 
5 x H2	



1 x ALLEN KEY (6MM)
(PROVIDED)

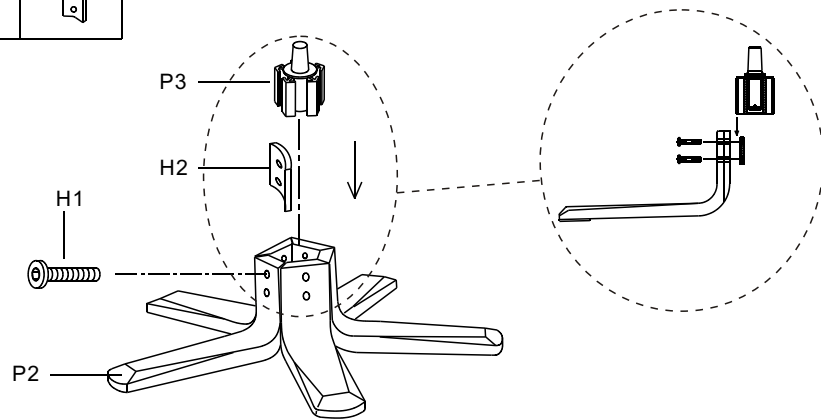

STEP 3


YOU WILL NEED:	
4 x H4	27mm 


1 x ALLEN KEY (5MM)
(PROVIDED)

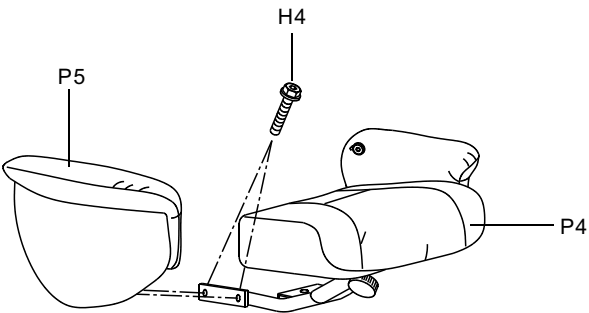

Do not tighten the screws

STEP 4

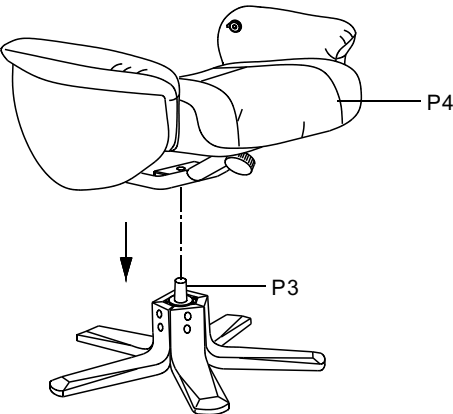

284mm