


Assembly Instructions


SNOW

Bedside- 2 Drawers

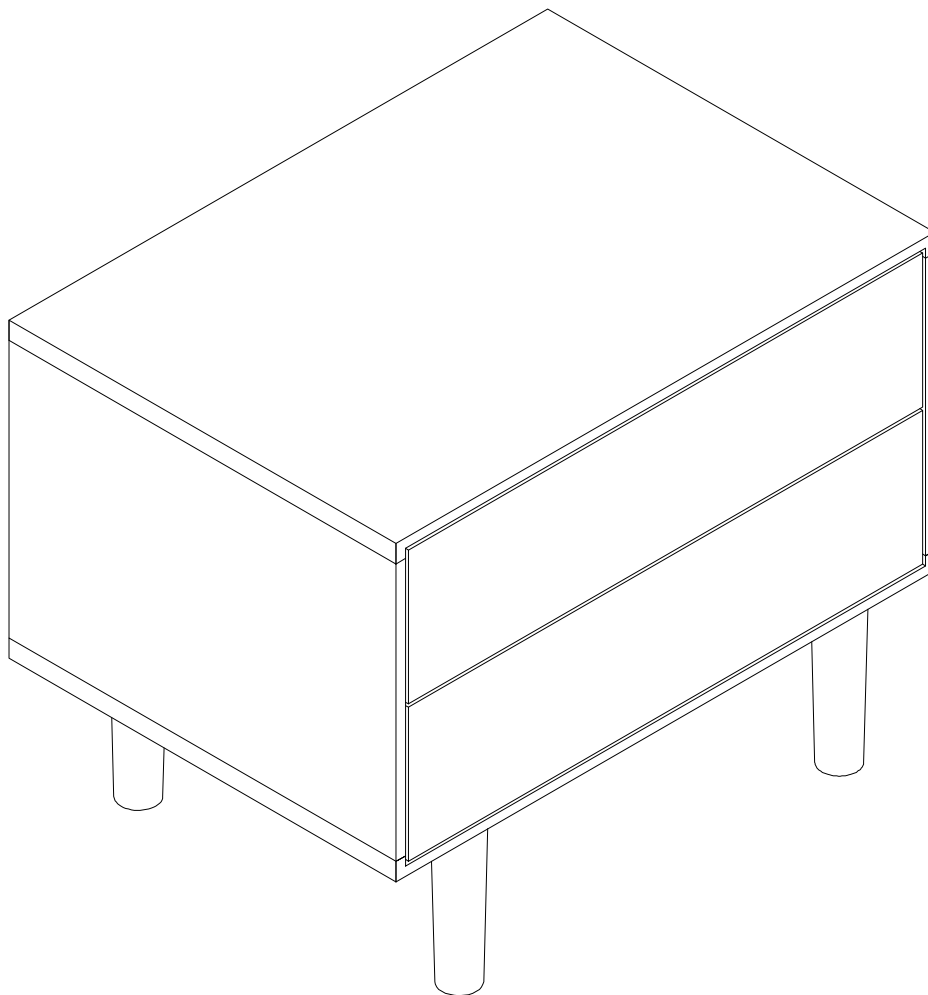


What you Need


To Assemble the Body



1xAllen key(4mm)
(Provided)

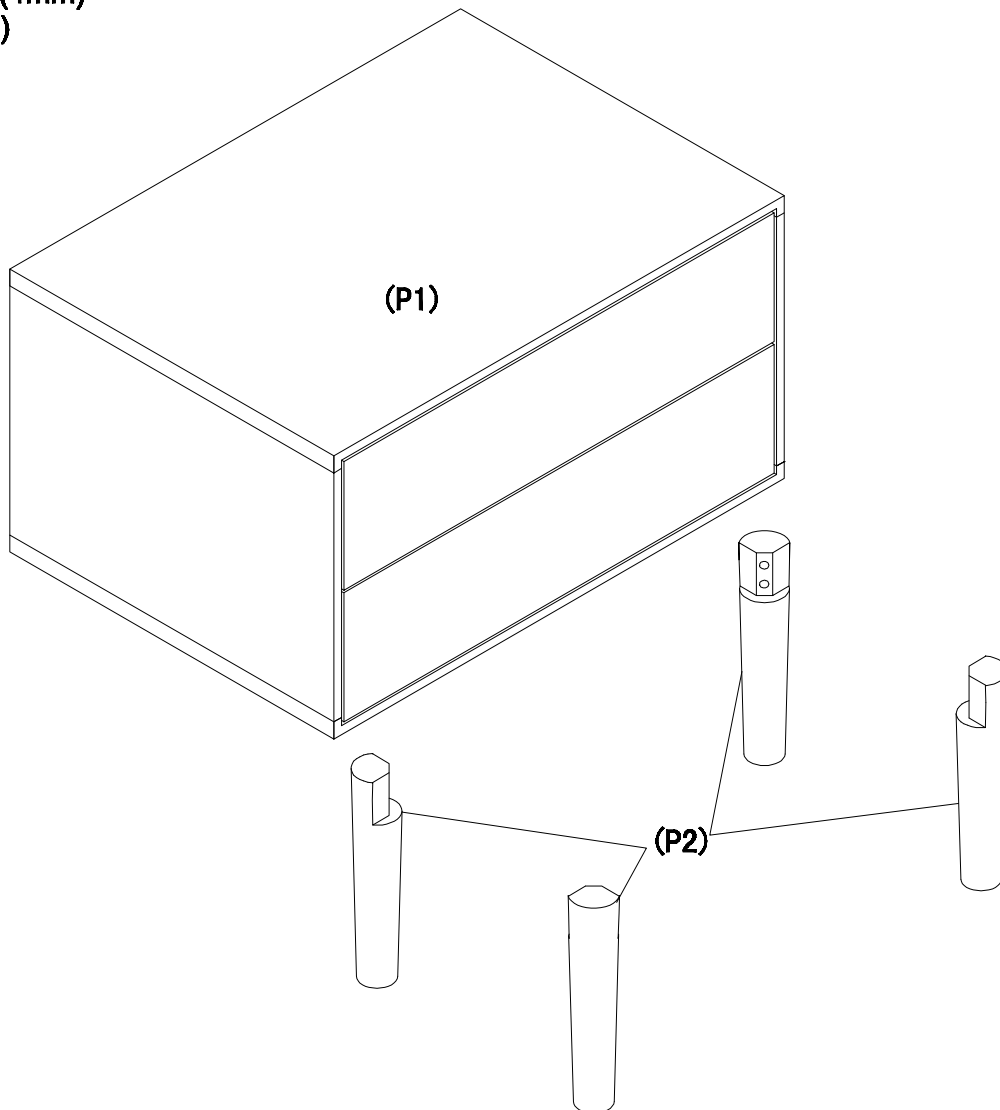

1 x Allen key
(H1)



8 x Allen
Bolts
(H2)







8 x Washers
(H3)

Please make sure you have all these parts before you start.


Step 1

You Will need:

1 x Allen key (H1)	
8 x Allen Bolts (H2)	
8 x Washers (H3)	

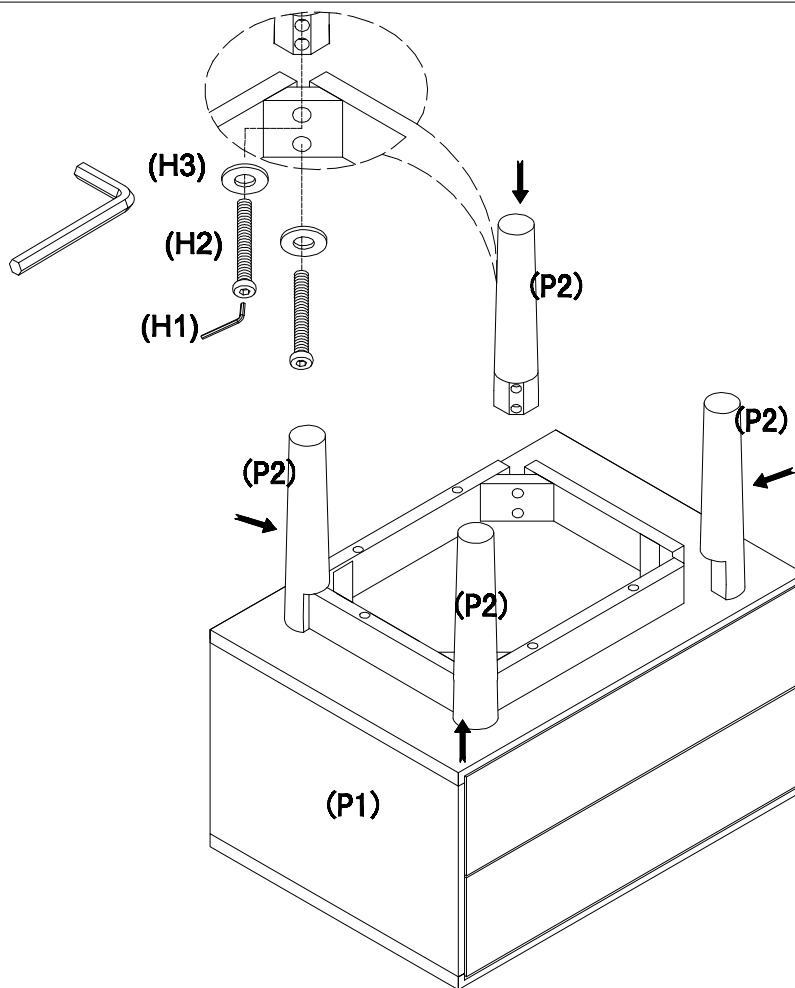

Step 2

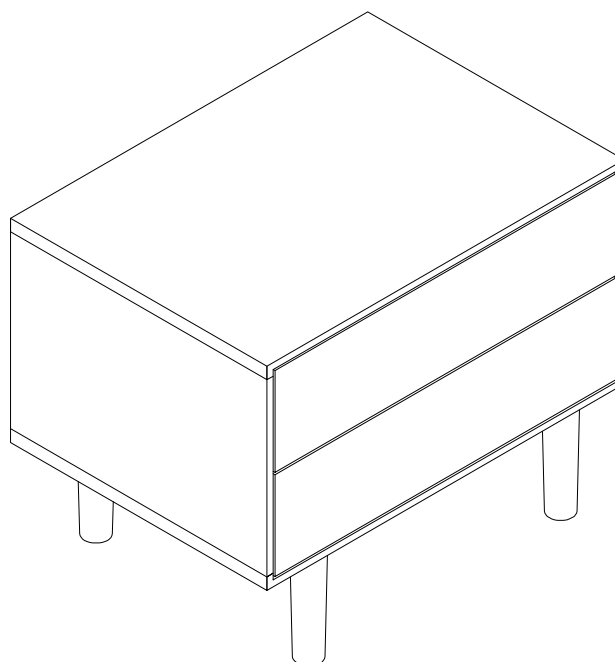

The job is complete!

In the interest of our environment
Please dispose of all packaging thoughtfully