


Assembly Instructions

SNOW

Narrow Bookshelf

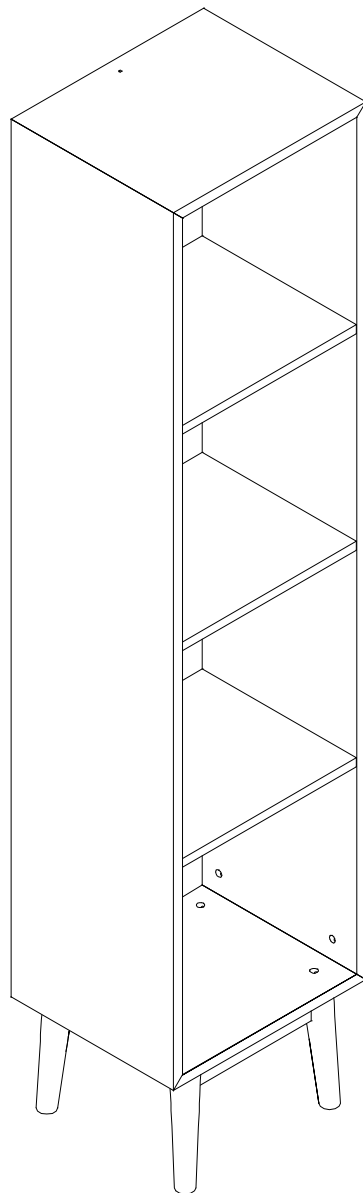

Ver1.1

jar
Furniture

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1




Read Instructions carefully.
Check no parts are missing.

2

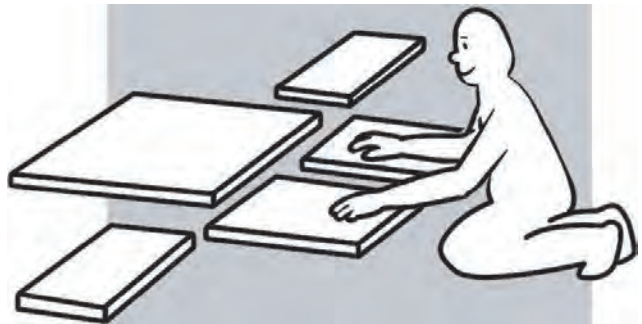

Lay out all of the components on a soft surface
as if you were preparing to do a jigsaw puzzle.

3

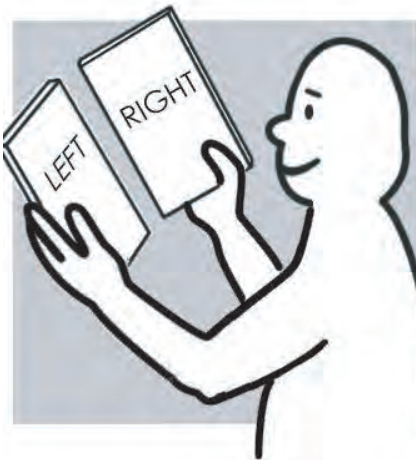


Carefully identify each component, especially
those that are similar. The most common mistake
is getting things back to front.

4




Separate and identify each component from the
hardware pack and rest each one in its proper
location before fastening.

5

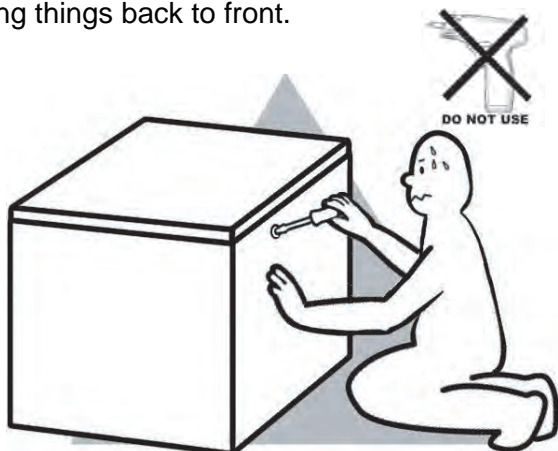

DO NOT fully tighten screws (leave slightly
loose). When the item is fully assembled
tighten the screws - but do not over tighten.



6

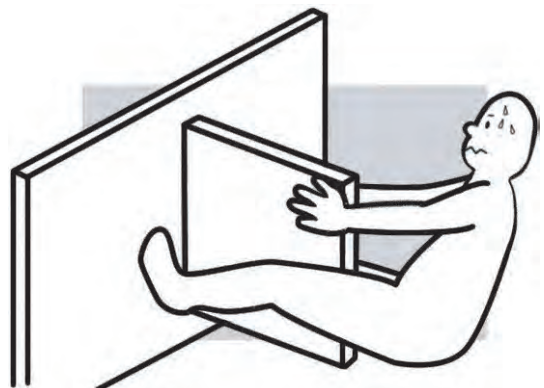














If glue is required **DO NOT** set until you are
certain that the parts belong together.

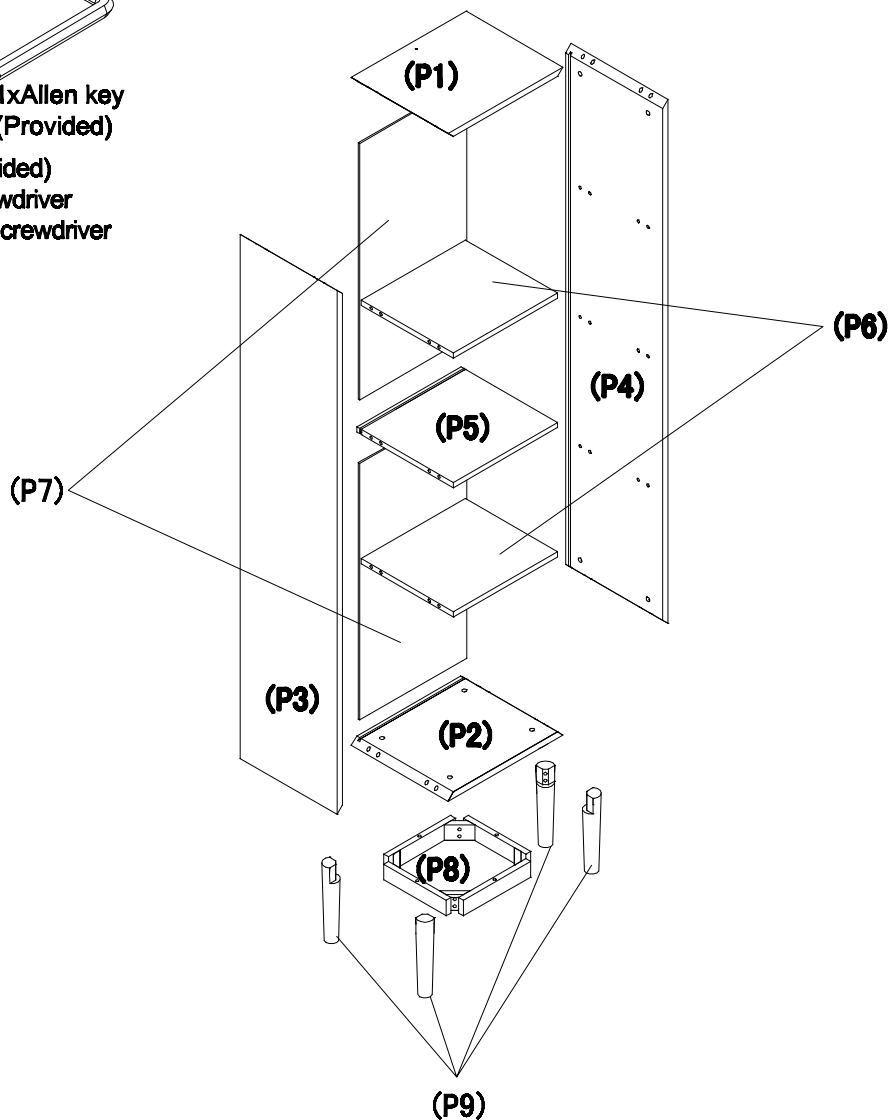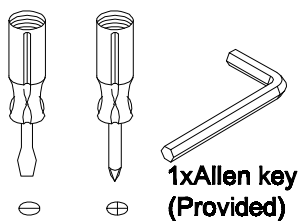What you Need

To Assemble the Body



						
20 x Dowels (H1)	12 x Cam Bolts (H2)	28 x Cam Nuts (H3)	8 x Twin Bolts (H4)	8 x Back Panel Holders (H5)	8 x Long Timber Screws (H6)	28 x Covers (H7)
						
8 x Short Allen Bolts (H8)	4 x Long Allen Bolts (H9)	1 x Allen key (H10)	8 x Washers (H11)	1 x Short Timber Screws (H12)	1 x Safety Strap (H13)	

Please make sure you have all these parts before you start.


Step 1

You Will need:

12 x Dowels
(H1)




12 x Cam
Bolts
(H2)

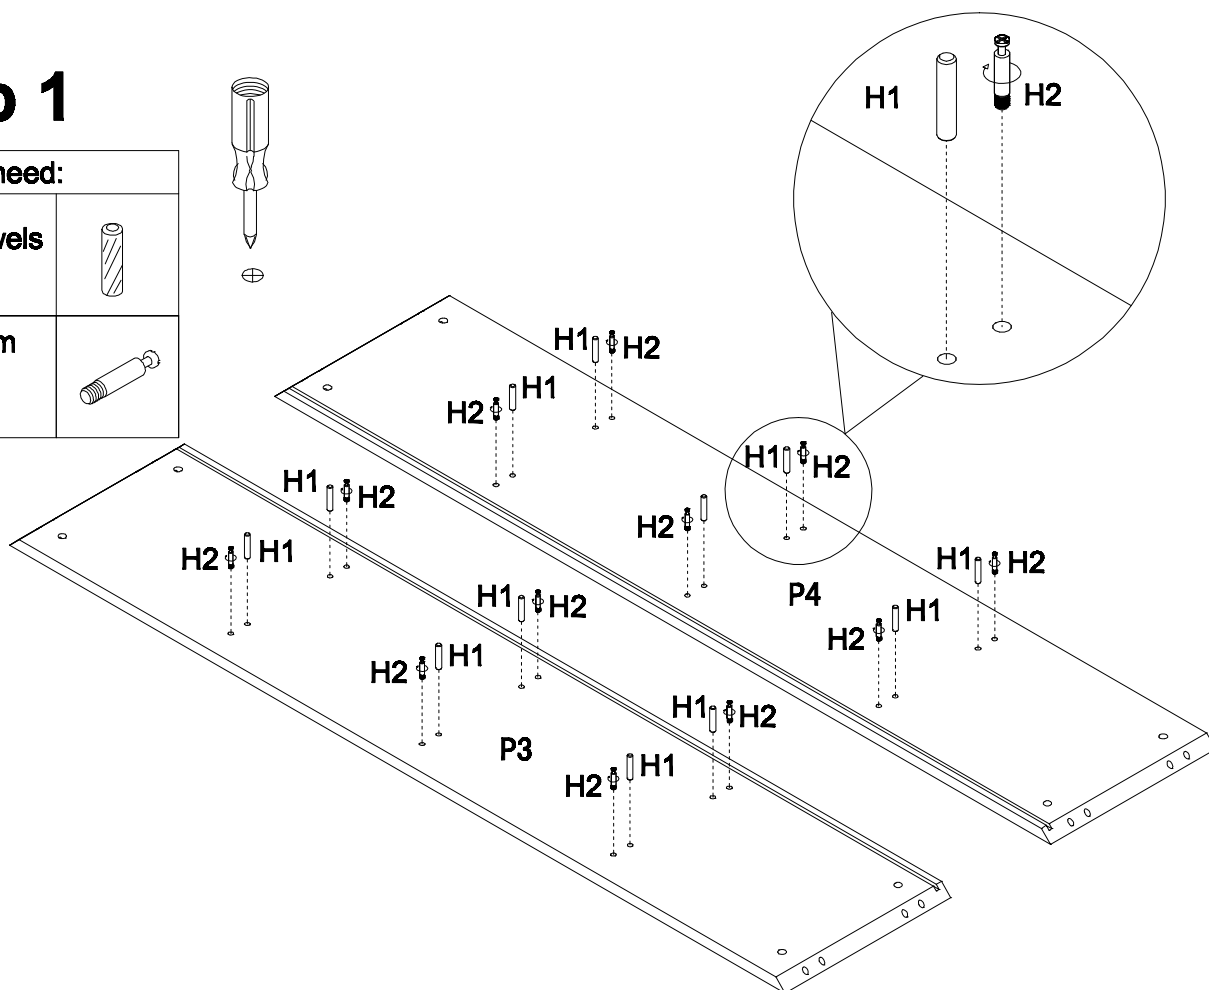


Step 2

You Will need:

6 x Cam
Nuts
(H3)

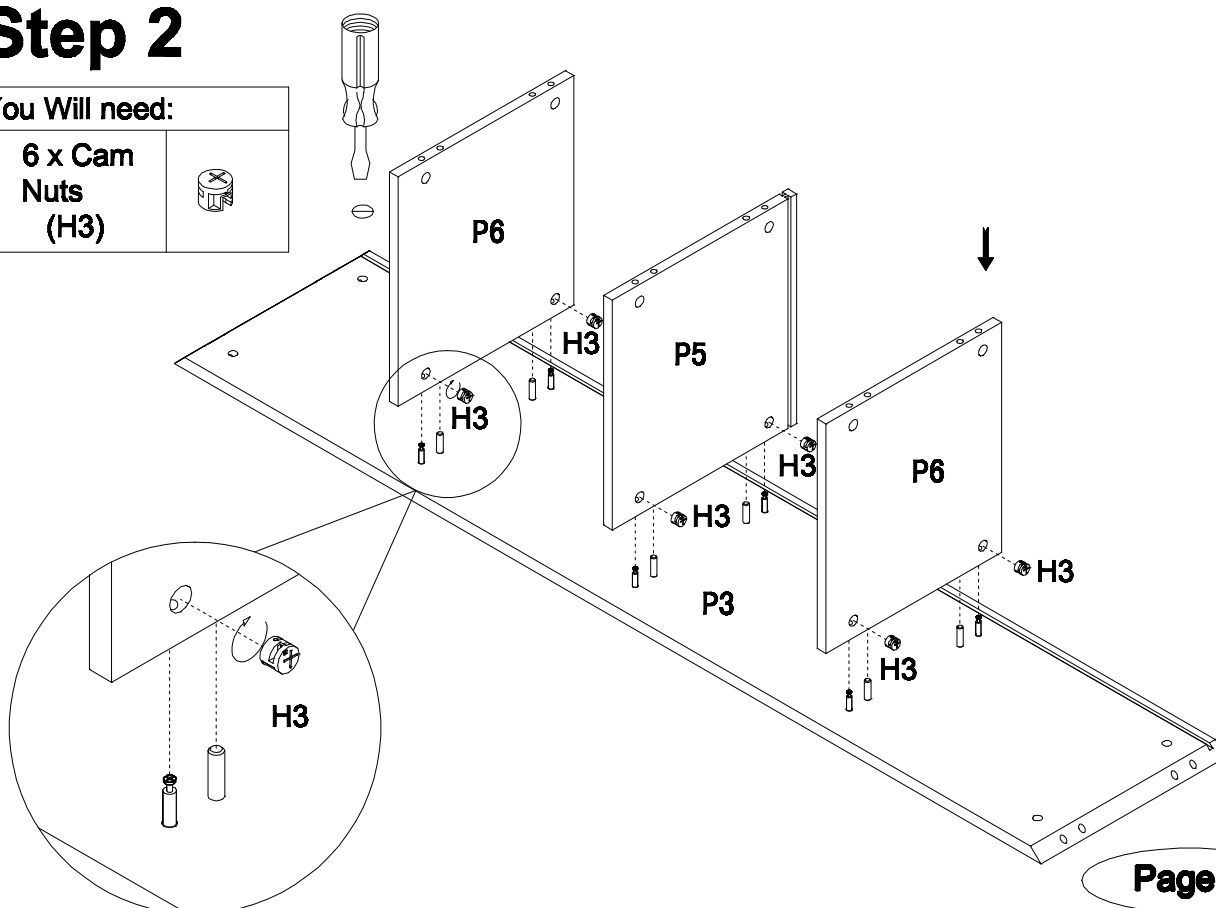


Step 3

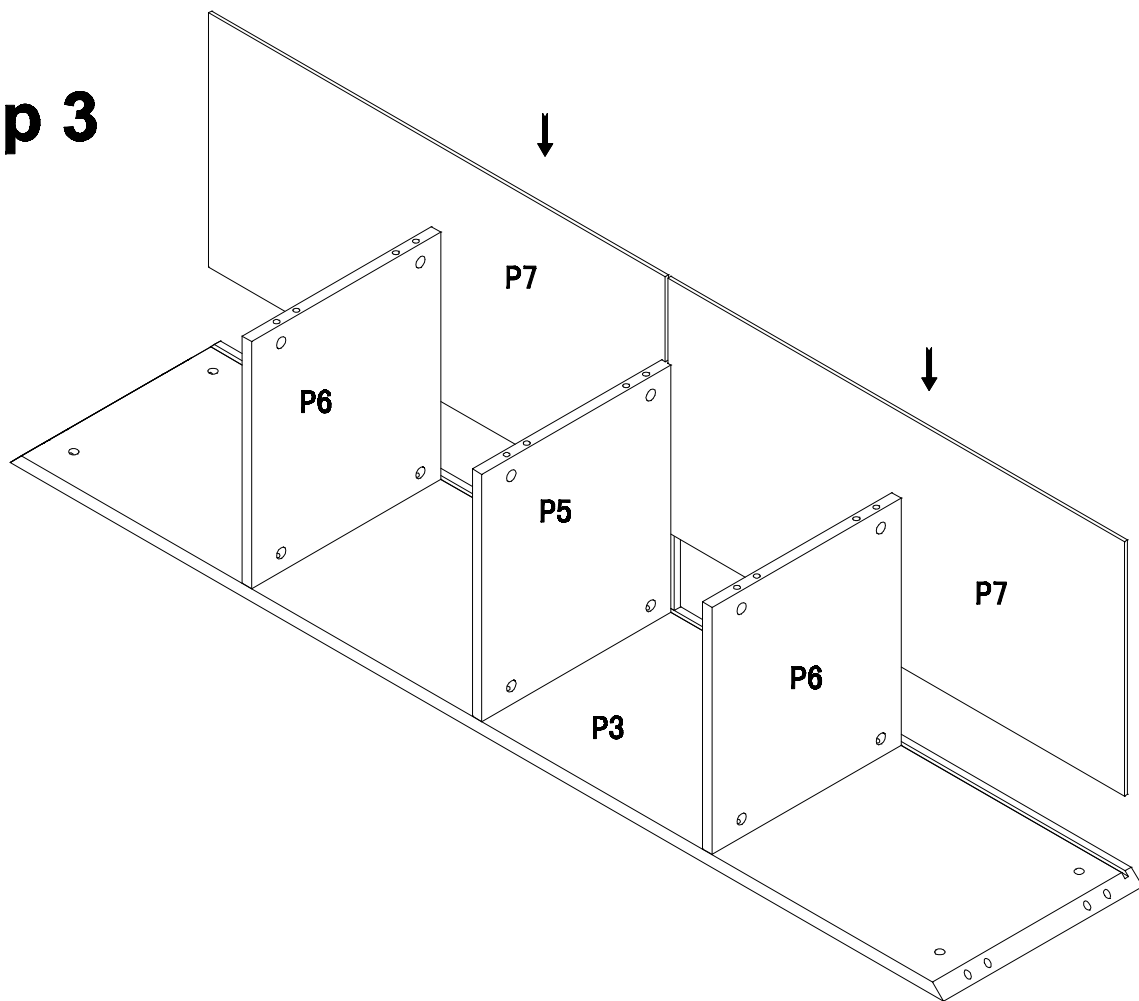



Step 4


You Will need:

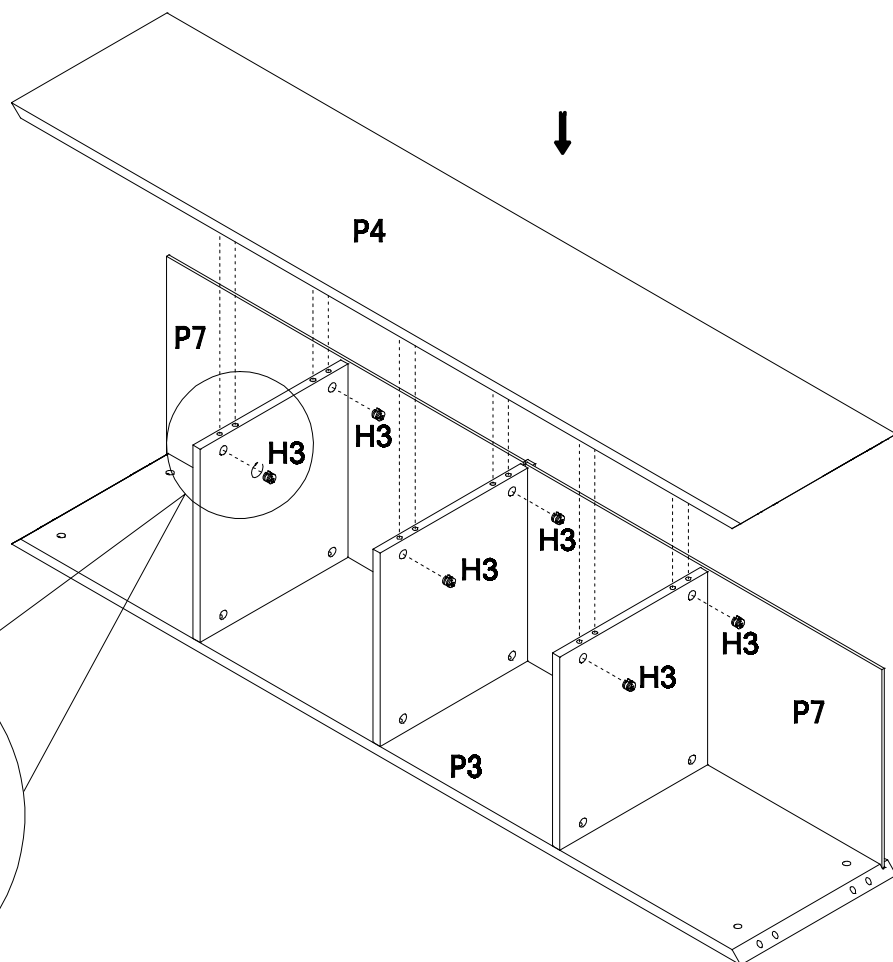6 x Cam
Nuts
(H3)






Step 5

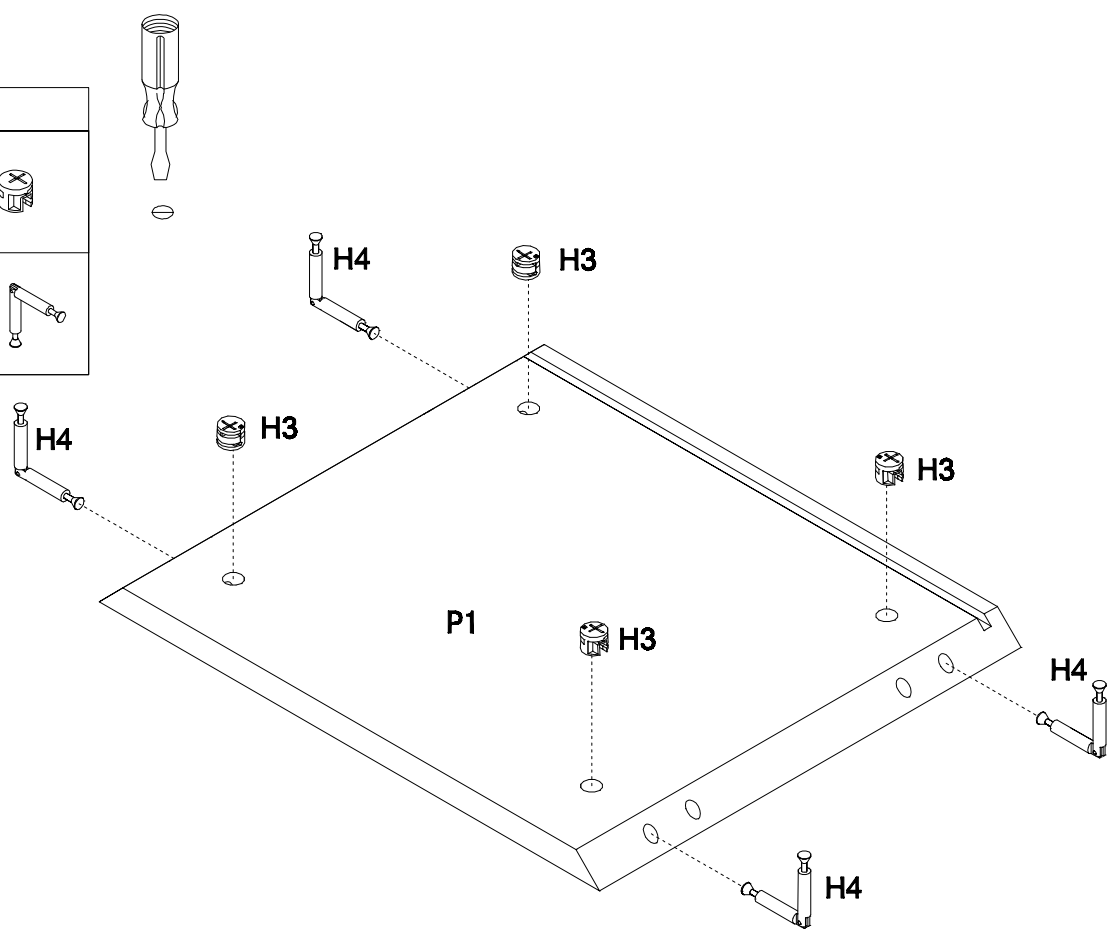You Will need:	
4 x Cam Nuts (H3)	
4 x Twin Bolts (H4)	






Step 6

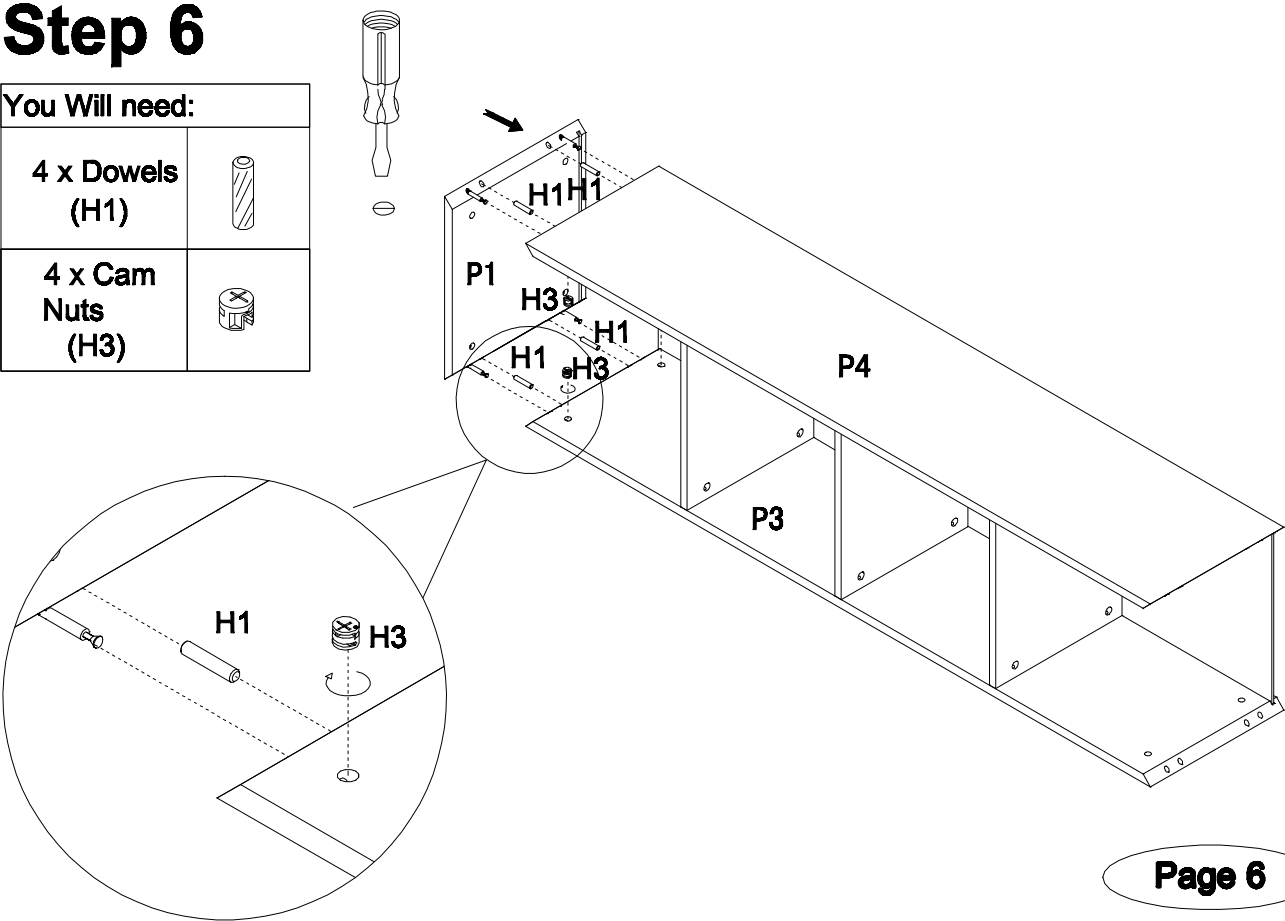You Will need:	
4 x Dowels (H1)	
4 x Cam Nuts (H3)	






Step 7

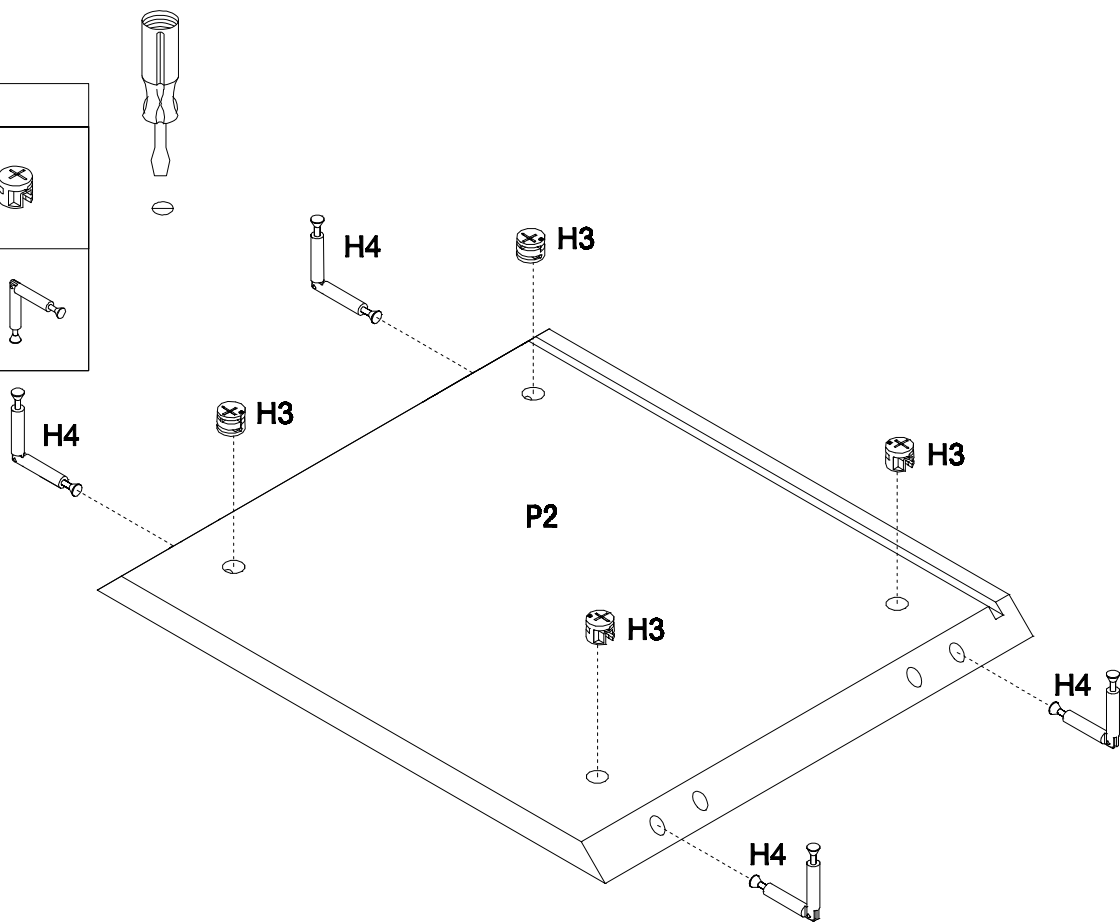You Will need:	
4 x Cam Nuts (H3)	
4 x Twin Bolts (H4)	






Step 8


You Will need:	
4 x Dowels (H1)	
4 x Cam Nuts (H3)	

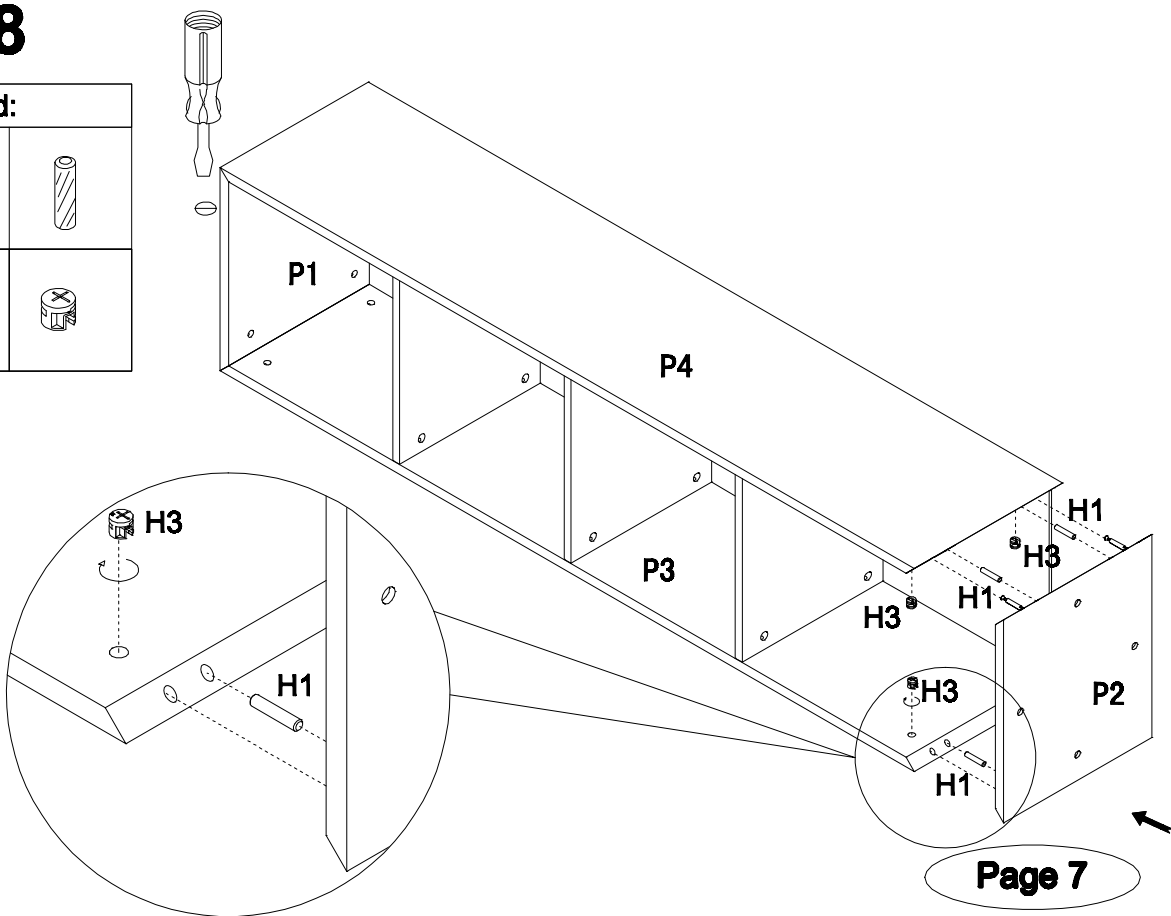

Step 9




You Will need:

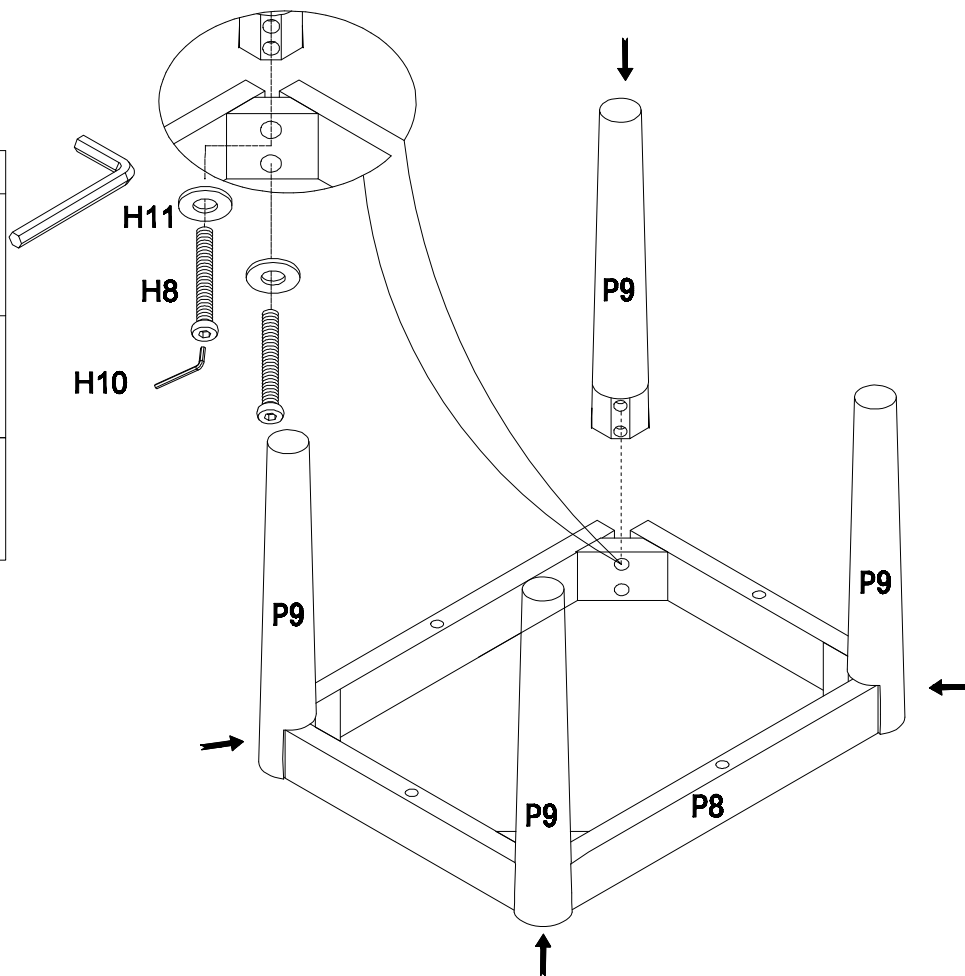
8 x Short Allen Bolts (H8)	
1 x Allen key (H10)	
8 x Washers (H11)	



Step 10

You Will need:

28 x Covers (H7)	
4 x Long Allen Bolts (H9)	
1 x Allen key (H10)	

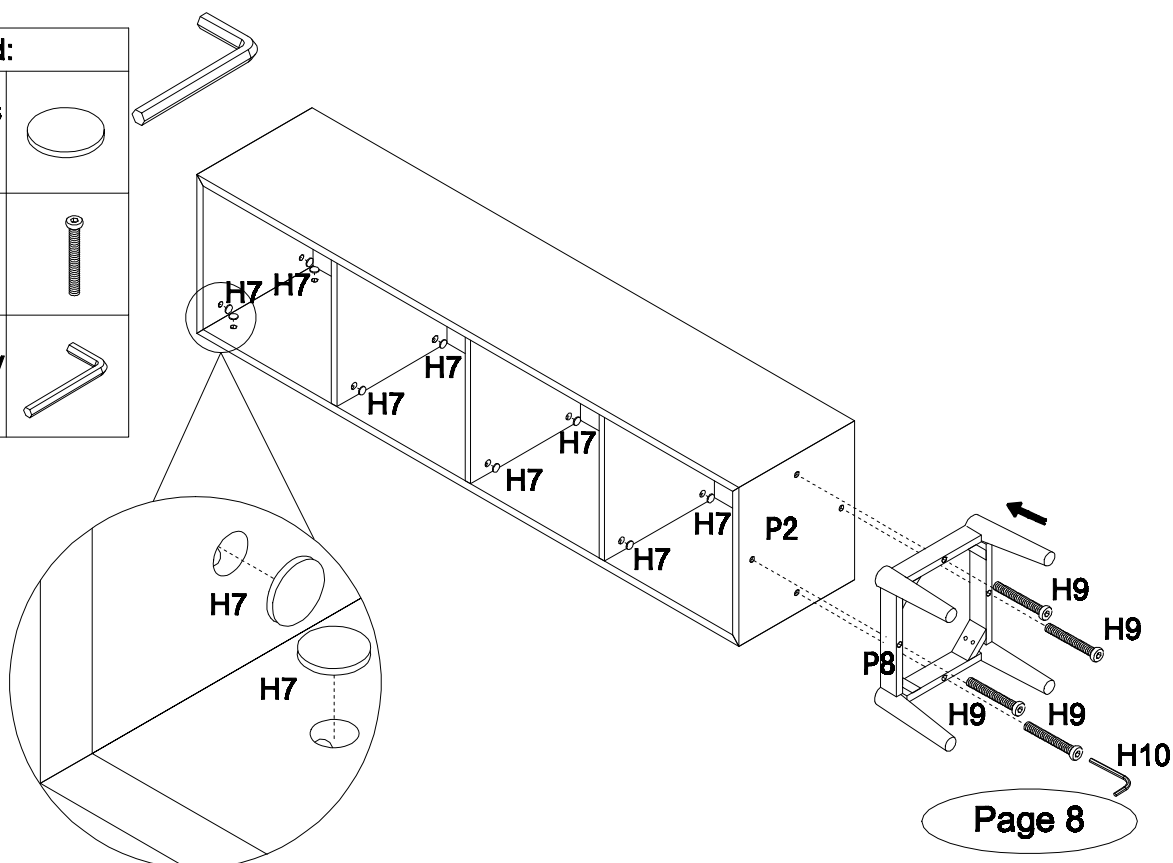

Step 11

You Will need:

8 x Back
Panel Holders
(H5)




8 x Long
Timber Screw
(H6)



1 x Short
Timber Screws
(H12)




1 x Safety
Strap
(H13)

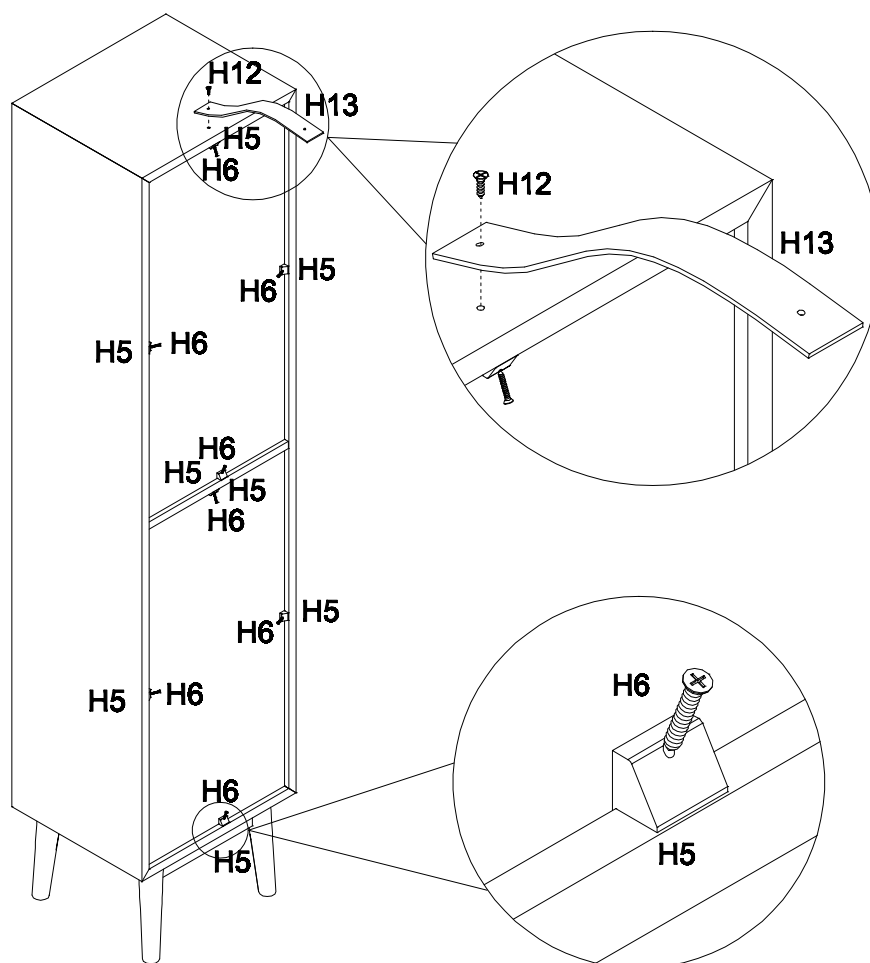


Step 12

Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

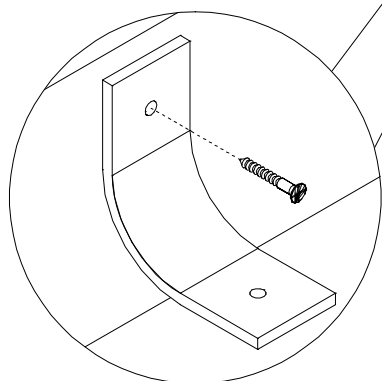

(Screws not provided)

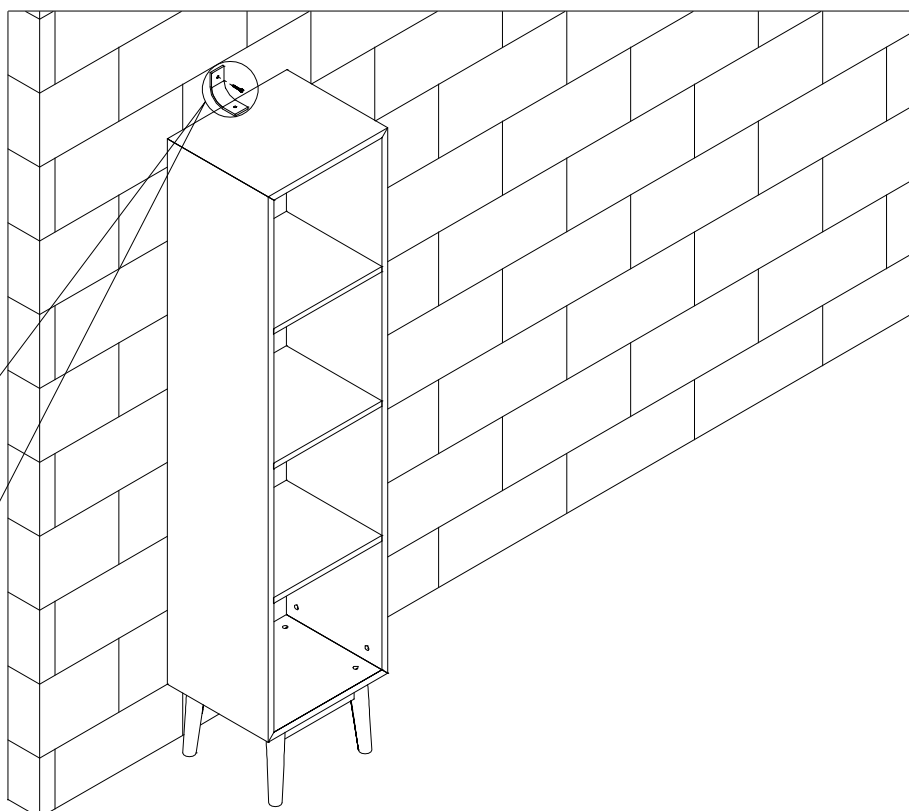

The job is complete!

In the interest of our environment
Please dispose of all packaging thoughtfully