





ASSEMBLY INSTRUCTIONS

MODEL : WM1792-BS5

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * PLEASE FOLLOW ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT FULLY TIGHTEN ALL SCREWS UNTIL THE CHAIR PARTS HAVE BEEN ASSEMBLED.

| HARDWARE LIST | | | PART LIST | | |
|---------------|--|------|-----------|---------------------|-----|
| 1 | JCBC M6 x 60mm + S/W M6 + F/W M6 x 19mm  | 4PCS | A | FRONT LEG (RIGHT) | 1PC |
| 2 | JCBC M6 x 40mm + S/W M6 + F/W M6 x 19mm  | 4PCS | B | FRONT LEG (LEFT) | 1PC |
| 3 | ALLEN KEY M4  | 1PC | C | BACK LEG (LEFT) | 1PC |
| 4 | FH SCREW #8 x 32mm  | 8PCS | D | BACK LEG (RIGHT) | 1PC |
| | | | E | SIDE RAIL (RIGHT) | 1PC |
| | | | F | SIDE RAIL (LEFT) | 1PC |
| | | | G | FRONT RAIL | 1PC |
| | | | H | BACK RAIL | 1PC |
| | | | I | CUSHION SEAT | 1PC |


PLEASE NOTE :

(1) DO NOT FULLY-TIGHTEN THE NUTS AND BOLTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


(TO AVOID CAUSING DAMAGE TO THE THREADS, DO NOT OVER-TIGHTEN THE NUTS AND BOLTS.)

(2) KEEP ALL PARTS OUT OF THE REACH OF CHILDREN.


STEP 1

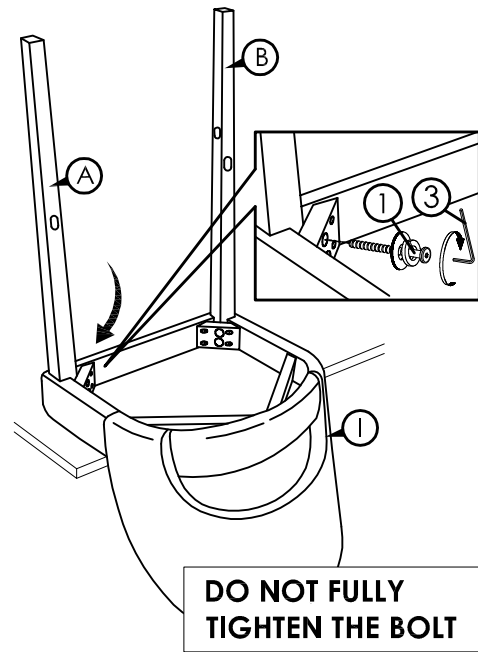


STEP 2

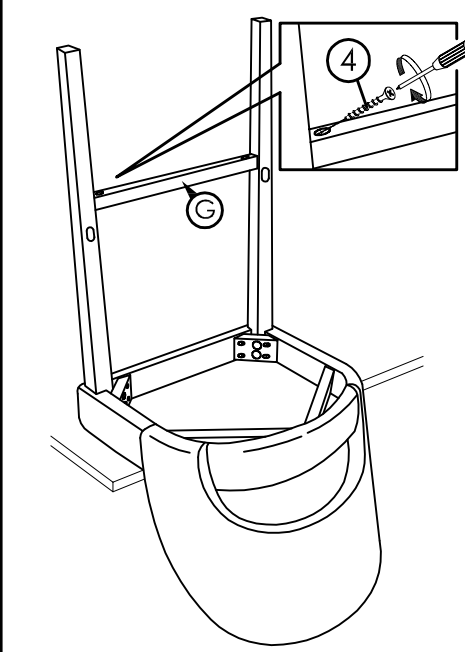


STEP 3

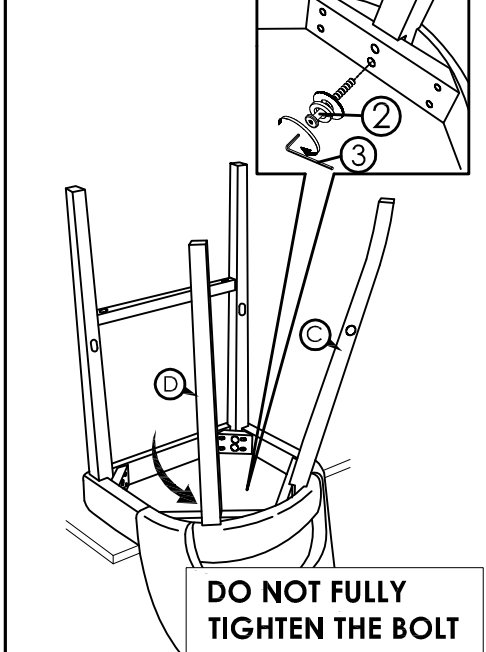

STEP 4

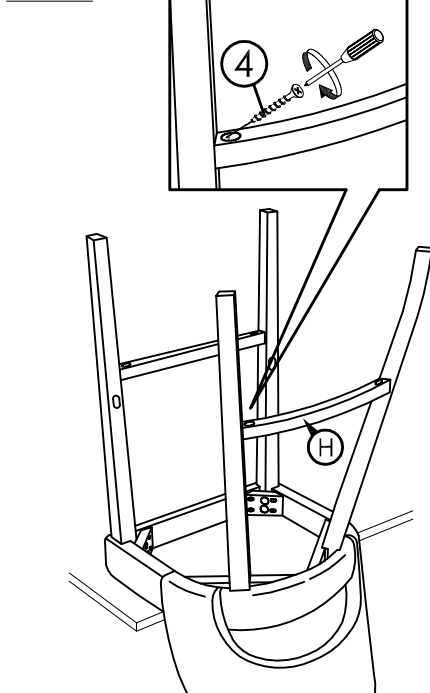

STEP 5

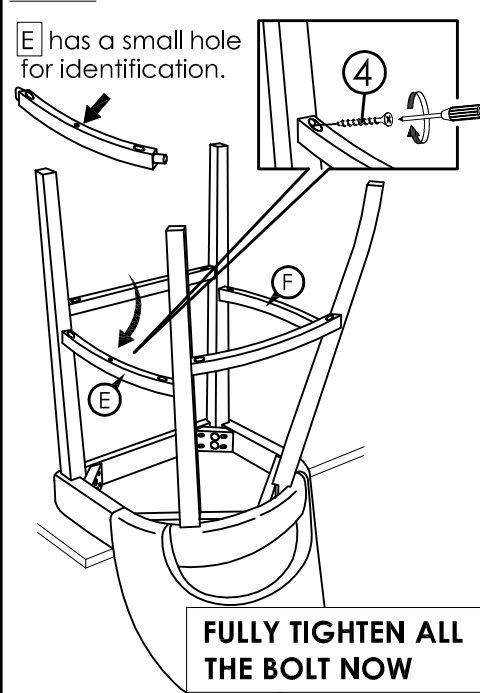

STEP 6

